



Product manual

Regulation louvers

RL, RL-A, RL-R

Airflow regulation

Version 1.0.4
Date: 09.07.2025.

Regulation louvers RL

Regulation louver types RL, are used for air volume and pressure control. They are made out of galvanized steel sheet. Louver gears and bearings are produced out of ABS plastic. Louver can be operated manually or equipped with electric actuator (24V or 230V).

- opposed louver blade operation
- Δpmax = 1000 Pa; tmax = 70 °C
- casing air leakage according to EN1751, class C
- open/close, continuous, fast acting and spring return actuators



- ▶ [RL Product overview](#)
- ▶ [RL-A Product overview](#)
- ▶ [RL-R Product overview](#)
- ▶ [Ordering key](#)
- ▶ [Actuators](#)
- ▶ [Installation / Diagrams](#)



PRODUCT OVERVIEW

AIRFLOW REGULATION

DIMENSIONS AND WEIGHTS


Height H [mm]	Base B [mm]																		
	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100
100																			
150 *																			
200	2	2	3	3	3	4	4	5	5								8	9	
250 *																			
300	3	3	4	4	5	5	5	6	6								9	10	
350 *																			
400	4	4	5	5	6	6	7	7	8								10	11	
500	4	4	5	5	6	7	7	8	9								11	12	
600	5	5	6	7	7	8	9	9	10								12	13	
700	6	6	7	8	8	9	10	11	11								13	14	
800	6	7	8	9	9	10	11	12	13								14	15	
900	7	7	8	9	10	11	12	13	14								15	16	
1000	7	7	9	10	11	12	13	14	15								16	17	

Weights are shown in kg.

- Not available
- * Blade 50mm

Motor drives

- LM 5 Nm
- NM 10 Nm
- SM 20 Nm

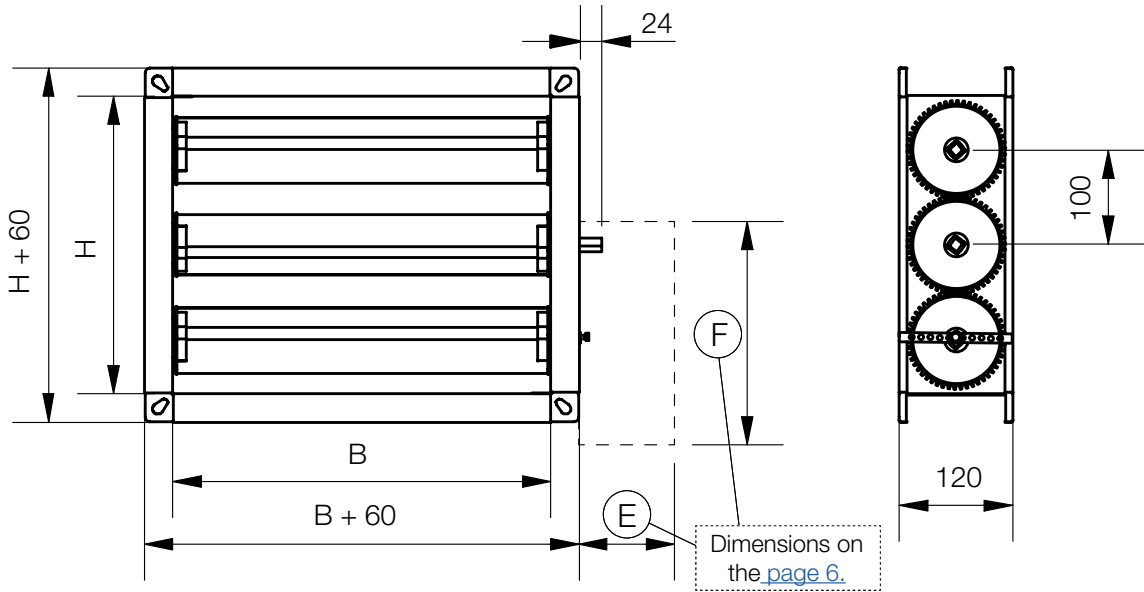

Airtight regulation louvers RL-A

Airtight regulation louvers type RL-A, are used for air volume and pressure control. They are made out of galvanized steel sheet. Louver gears and bearings are produced out of ABS plastic. Louver blades are equipped with blade tip seals that provide low air leakage. Louver can be operated manually or equipped with electric actuator (24V or 230V).

- opposed louver blade operation
- Δpmax = 1000 Pa; tmax = 70 °C
- casing air leakage according to EN1751, class C
- blade air leakage according to EN1751, class 3
- open/close, continuous, fast acting and spring return actuators



- ▼ [RL Product overview](#)
- ▼ [RL-A Product overview](#)
- ▼ [RL-R Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Actuators](#)
- ▼ [Installation / Diagrams](#)



PRODUCT OVERVIEW

AIRFLOW REGULATION

DIMENSIONS AND WEIGHTS


Height H [mm]	Base B [mm]																		
	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100
100																			
150 *																			
200	2	2	3	3	3	4	4	5	5								8		9
250 *																			
300	3	3	4	4	5	5	5	6	6								9		10
350 *																			
400	4	4	5	5	6	6	7	7	8								10		11
500	4	4	5	5	6	7	7	8	9								11		12
600	5	5	6	7	7	8	9	9	10								12		13
700	6	6	7	8	8	9	10	11	11								13		14
800	6	7	8	9	9	10	11	12	13								14		15
900	7	7	8	9	10	11	12	13	14								15		16
1000	7	7	9	10	11	12	13	14	15								16		17

Weights are shown in kg.

- Not available
- * Blade 50mm

Motor drives

- Belimo LM (F) / Schischek ExMax 5.10
- Belimo NM (F) / Schischek ExMax 5.10
- Belimo SM (F) / Schischek ExMax 15-15.30

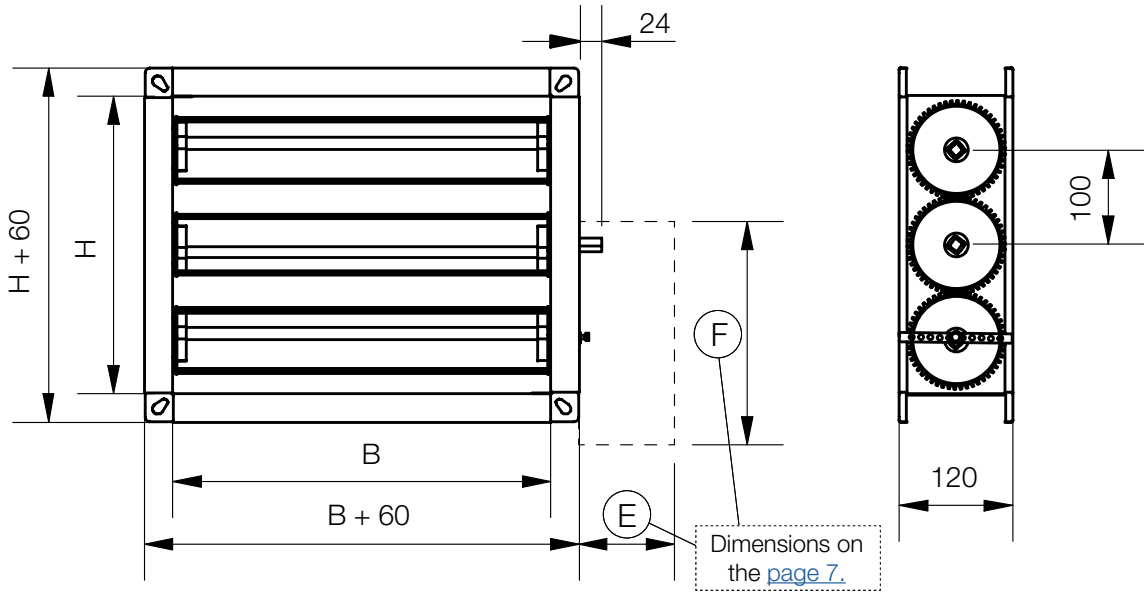


Reinforced regulation louvers RL-R


Reinforced regulation louvers type RL-R, are used for air volume and pressure control. They are made out of galvanized steel sheet. Louver bearings are produced out of brass. Louver can be operated manually or equipped with electric actuator (24V or 230V).

- opposed louver blade operation
- $\Delta p_{max} = 1000 \text{ Pa}$; $t_{max} = 70 \text{ }^{\circ}\text{C}$
- open/close, continuous, fast acting and spring return actuators



- ▼ [RL Product overview](#)
- ▼ [RL-A Product overview](#)
- ▼ [RL-R Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Actuators](#)
- ▼ [Installation / Diagrams](#)

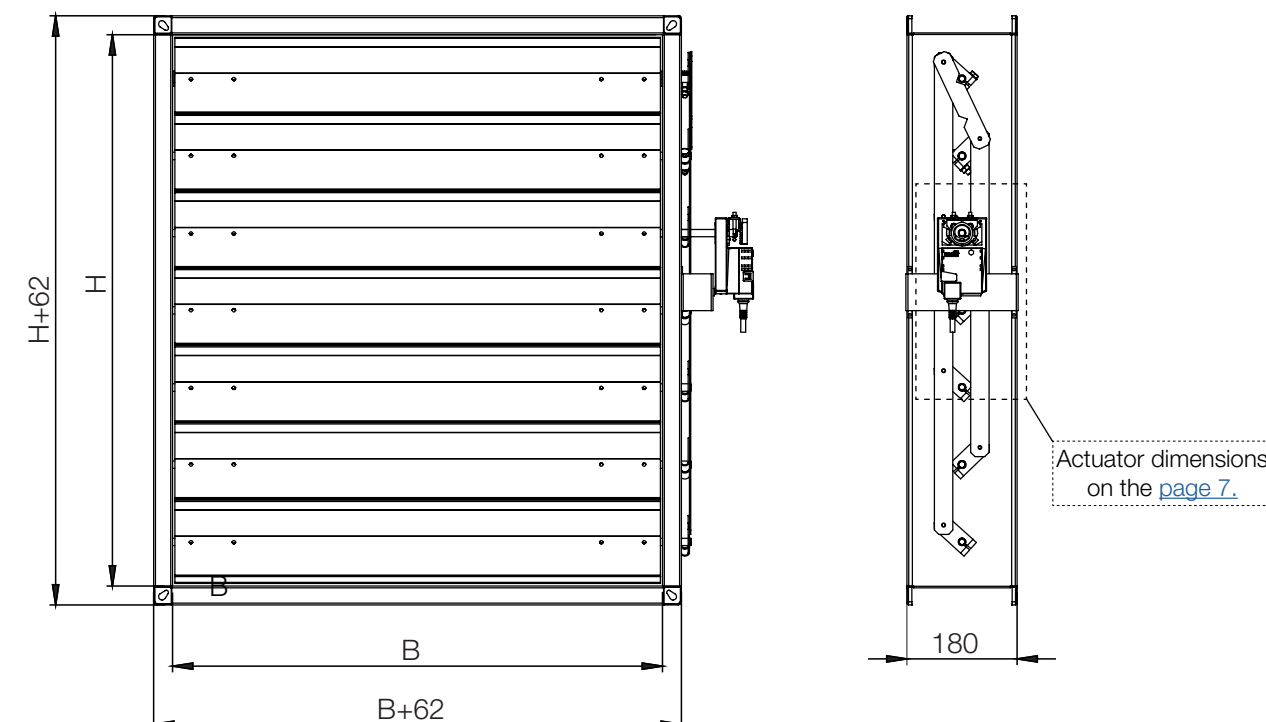

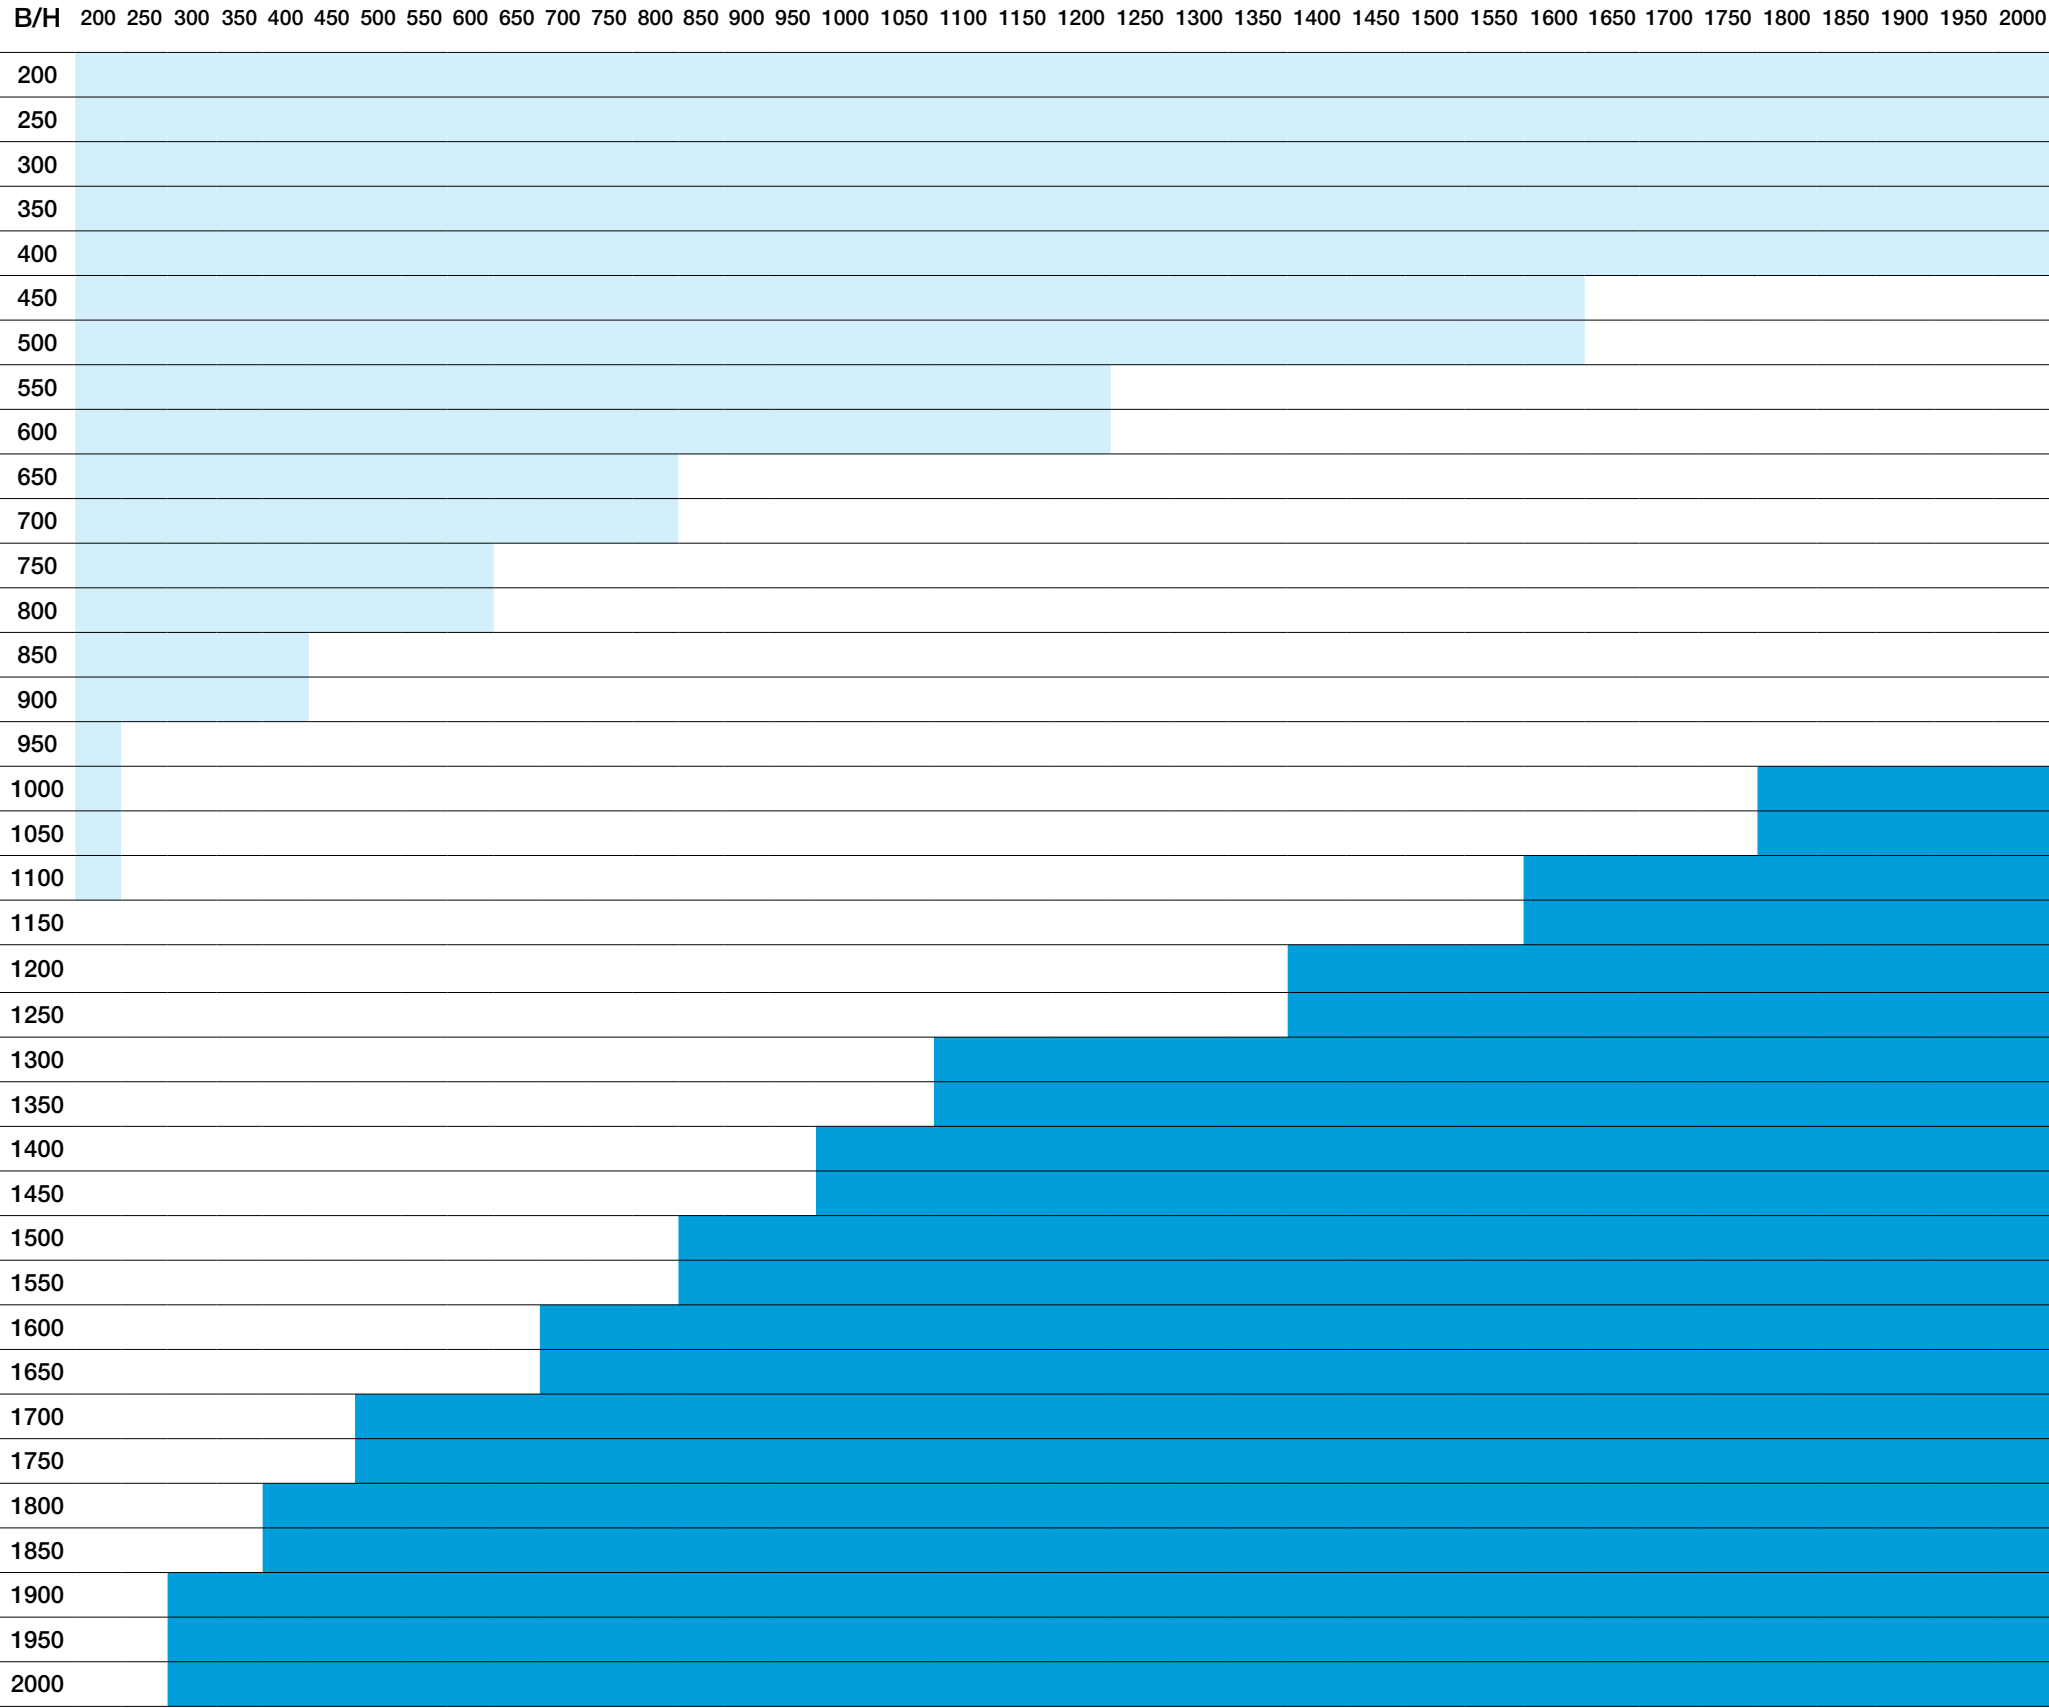


- ▼ [RL Product overview](#)
- ▼ [RL-A Product overview](#)
- ▼ [RL-R Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Actuators](#)
- ▼ [Installation / Diagrams](#)



PRODUCT OVERVIEW

- Motor drives
- Belimo LM (F) / Schischek ExMax 5.10
 - Belimo NM (F) / Schischek ExMax 5.10
 - Belimo SM (F) / Schischek ExMax 15-15.30

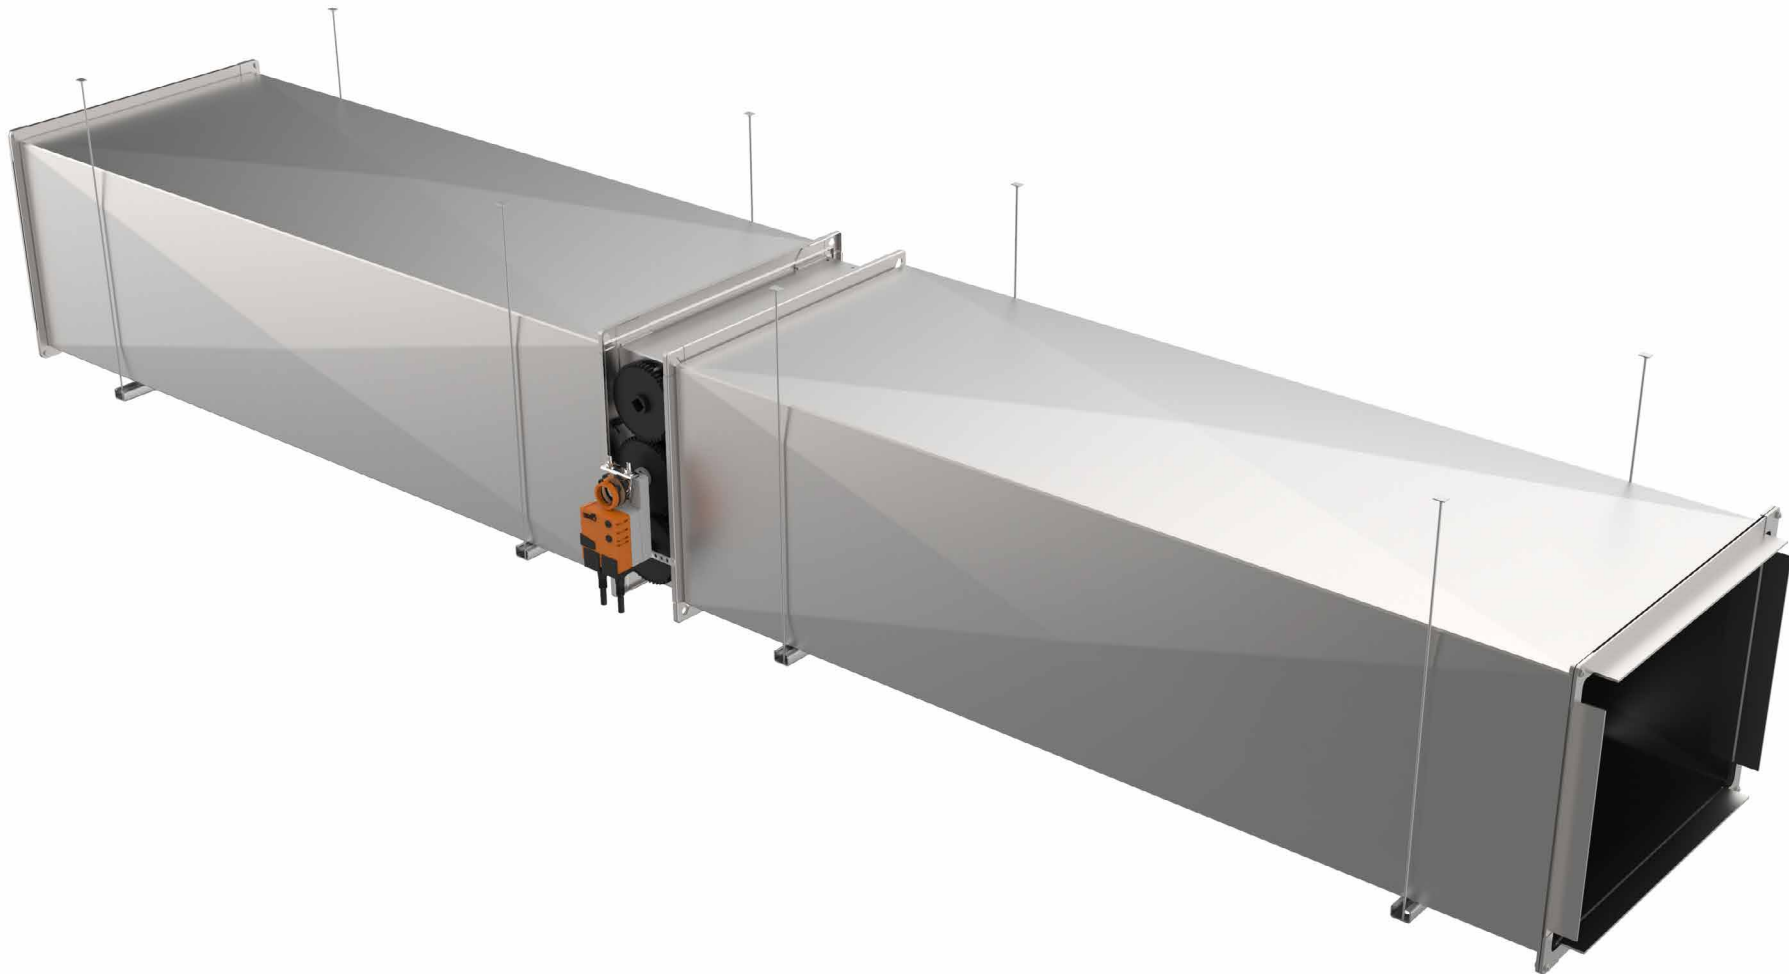

-  [RL Product overview](#)
-  [RL-A Product overview](#)
-  [RL-R Product overview](#)
-  [Ordering key](#)
-  [Actuators](#)
-  [Installation / Diagrams](#)



ORDERING KEY

AIRFLOW REGULATION

ORDERING KEY

(1) Regulation louver	(2) Dimension	(3) Actuator type	(4) Regulation
RL	- BxH	- M230	- OZ
(1) Regulation louver: RL RL-A RL-R	(2) BxH	(3) Actuator: R - manual M - preparation for the actuator M24 - actuator 24 V M230 - actuator 230 V	(4) Regulation (only for electric actuators) OZ - open/close K - continuous F - spring return Q - fast acting QK - fast acting/ continuous



Belimo motor drive

- motor drives - Belimo (open/close, continuous, fast-acting, spring return)
- power supply - AC 24V, 50/60 Hz
- DC 24V
- IP54 degree of protection


Voltage AC/DC	Type	Control	Torque	Energy consumption	Wire sizing	Weight [kg] approx.	Dimension (F x E)
DC24V	LM24A	3-point	5 Nm	1 W	1.5 VA	0.46	160 x 90
	NM24A	3-point	10 Nm	1,5 W	3.5 VA	0.75	180 x 90
	SM24A	3-point	20 Nm	2 W	4VA	0.94	180 x 90
	LM24A-SR	continuous	5 Nm	1 W	2VA	0.40	160 x 90
	NM24A-SR	continuous	10 Nm	2 W	4VA	0.74	180 x 90
	SM24A-SR	continuous	20 Nm	2 W	4VA	0.93	180 x 90
	LMQ24A	fast-acting	4 Nm	13 W	Imax 20 A @ 5 ms	0.87	190 x 100
	NMQ24A	fast-acting	8 Nm	13 W	Imax 20 A @ 5 ms	1	205 x 110
	SMQ24A	fast-acting	16 Nm	15 W	Imax 20 A @ 5 ms	1.7	180 x 110
	LF24	spring return	4 Nm	5 W	Imax 5.8 A @ 5 ms	1.4	220 x 110
AC/DC 24/230V	NFA	spring return	10 Nm	6 W	9,5 VA	3.1	240 x 120
AC 230V	LM230A	3-point	5 Nm	1,5 W	3,5 VA	0.46	160 x 90
	NM230A	3-point	10 Nm	2.5 W	5,5 VA	0.72	180 x 90
	SM230A	3-point	20 Nm	2.5 W	6 VA	1.1	180 x 90
	LM230A-SR	continuous	5 Nm	2 W	4 VA	0.50	180 x 90
	NM230A-SR	continuous	10 Nm	3,5 W	6,5 VA	0.84	190 x 90
	SM230A-SR	continuous	20 Nm	3.5 W	6,5 VA	1.1	205 x 90
	LF230	spring return	4 Nm	5 W	7 VA	1.6	220 x 110

- ▼ [RL Product overview](#)
- ▼ [RL-A Product overview](#)
- ▼ [RL-R Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Actuators](#)
- ▼ [Installation / Diagrams](#)


Wiring diagram

OZ -open/close

AC/DC 24 V, open/close

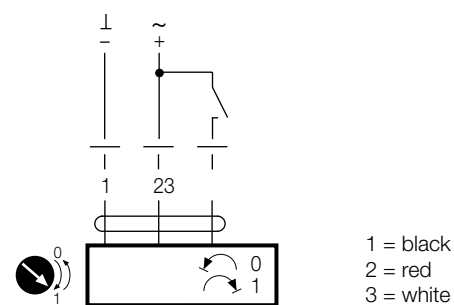


AC/DC 24 V, 3-point

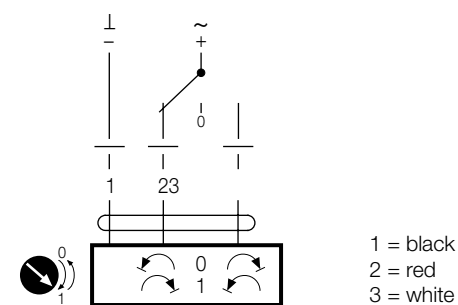


K -continuous

AC/DC 24 V, modulating

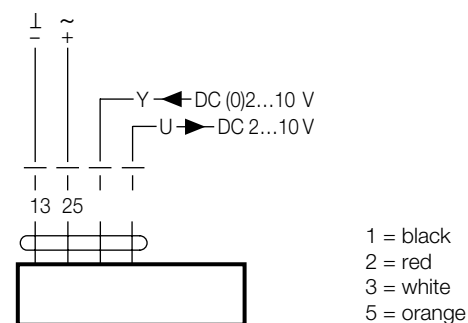


F -spring return

AC/DC 24 V, open/close

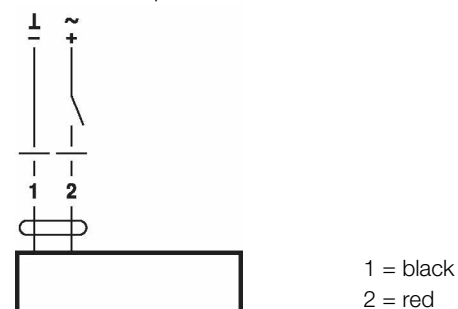

Q -fast-acting

AC/DC 24 V, open/close

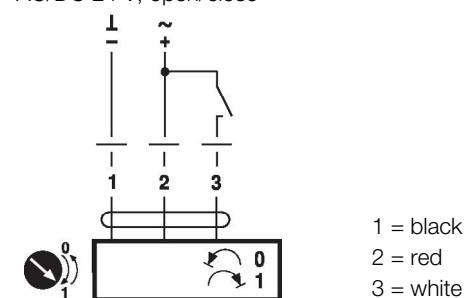

- ▼ [RL Product overview](#)
- ▼ [RL-A Product overview](#)
- ▼ [RL-R Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Actuators](#)
- ▼ [Installation / Diagrams](#)




ACTUATORS

Wiring diagram

QK -fast-acting/ continuous

AC/DC 24 V, modulating

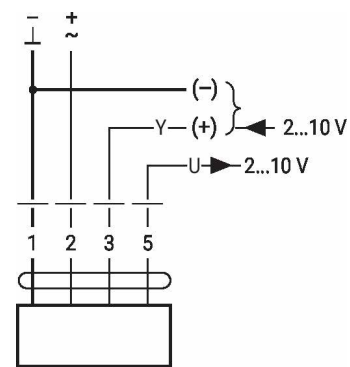

1	2	3		
		2 V		
		10 V		


Signal cable lengths

Wire colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange


A = Actuator
C = Control unit (controlling unit)
L1 = Connecting cable of the actuator
L2 = Customer cable
Ltot = Maximum signal cable length

- ▼ [RL Product overview](#)
- ▼ [RL-A Product overview](#)
- ▼ [RL-R Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Actuators](#)
- ▼ [Installation / Diagrams](#)

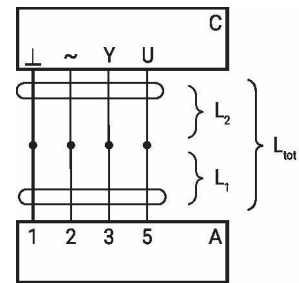

L ₂ ⊥/~	L _{tot} = L ₁ + L ₂	
	AC	DC
0.75 mm ²	≤30 m	≤5 m
1.00 mm ²	≤40 m	≤8 m
1.50 mm ²	≤70 m	≤12 m
2.50 mm ²	≤100 m	≤20 m

Note:
When several actuators are connected in parallel, the maximum signal cable length must be divided by the number of actuators.

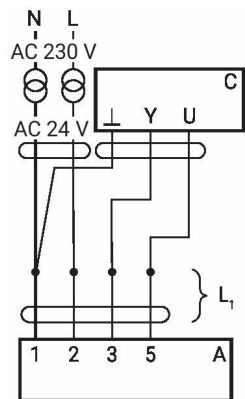

A = Actuator
C = Control unit (controlling unit)
L1 = Connecting cable of the actuator


Note:
There are no special restrictions on installation if the supply and the data cable are routed separately.

ACTUATORS



Supply from isolating transformer.
Parallel connection of other actuators possible.
Observe the performance data.

Installation process

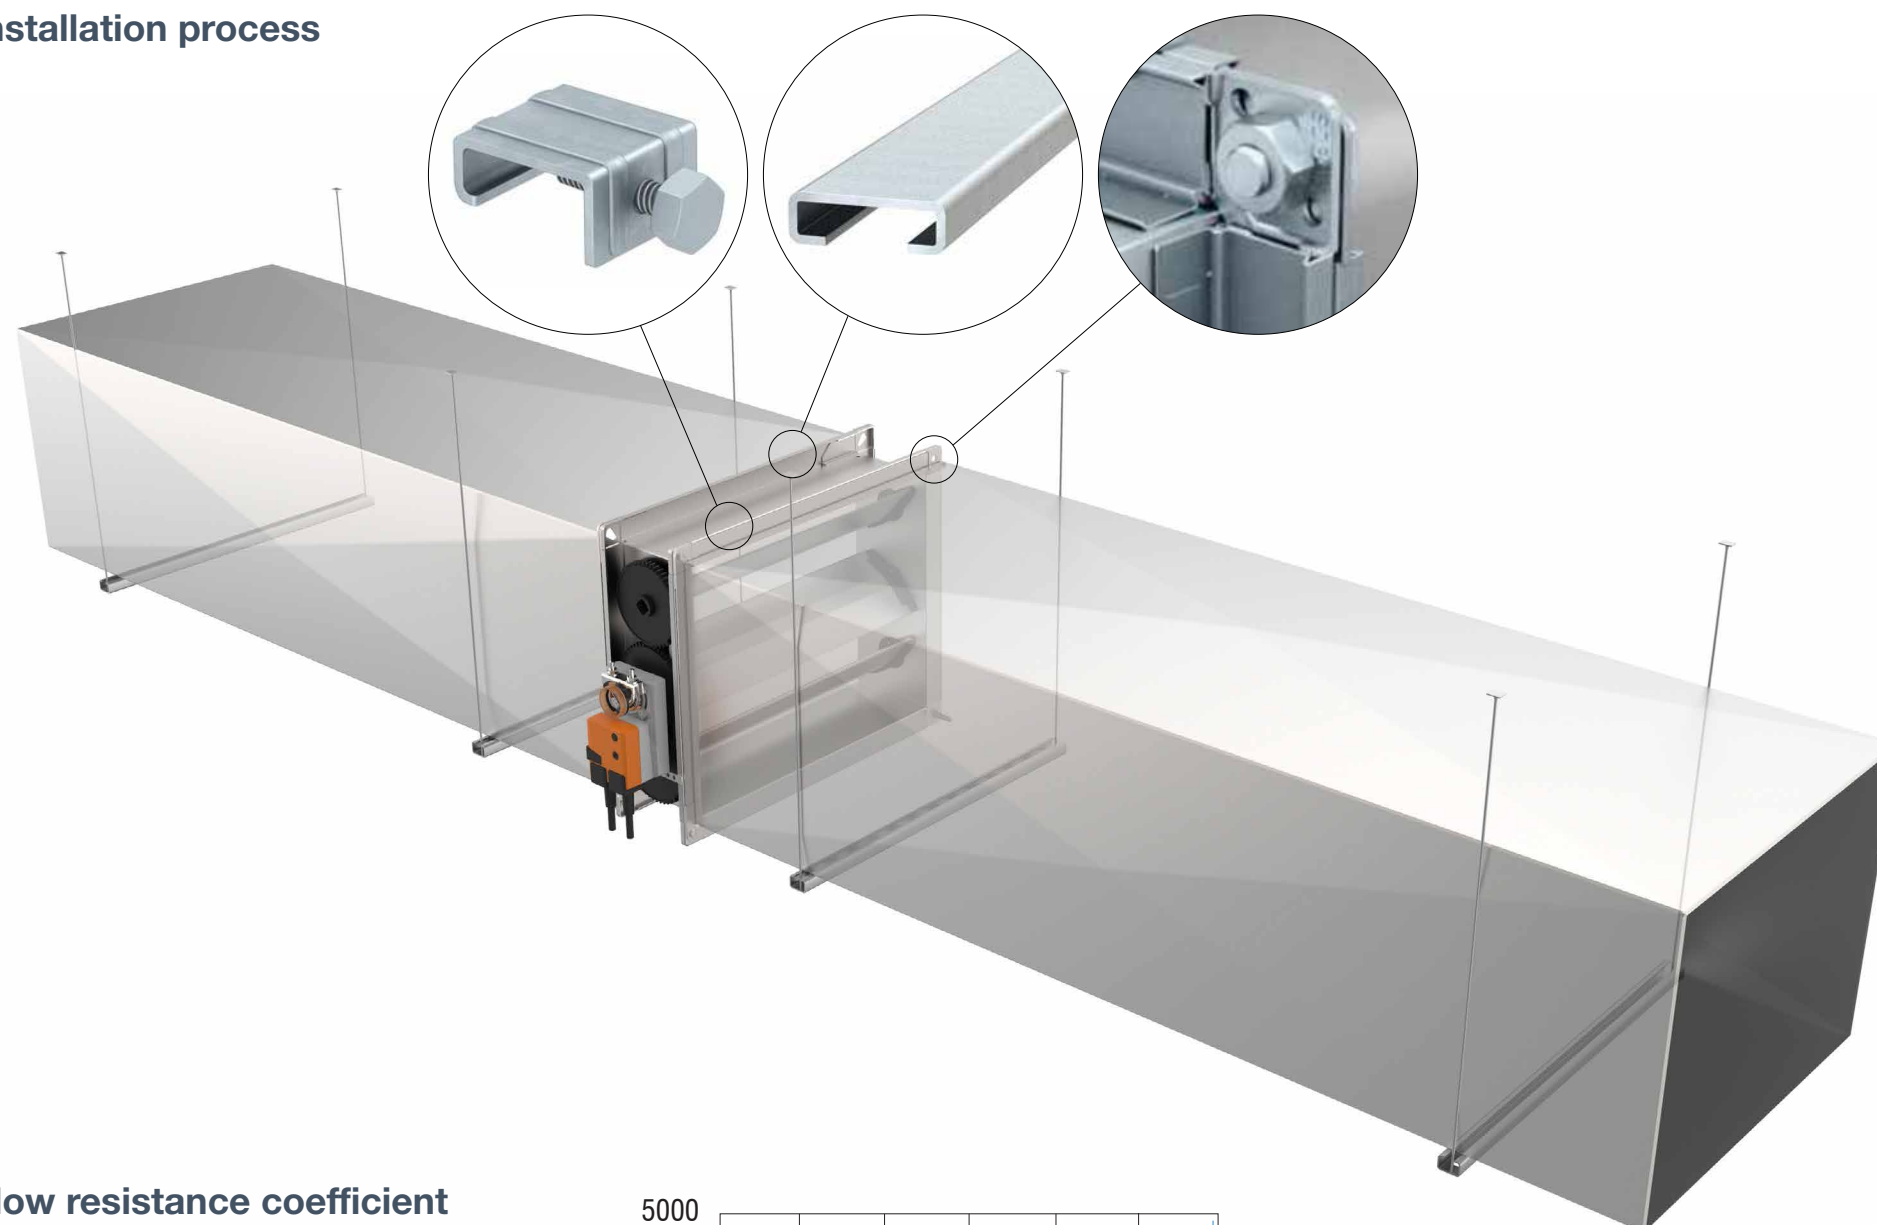


- ▼ [RL Product overview](#)
- ▼ [RL-A Product overview](#)
- ▼ [RL-R Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Actuators](#)
- ▼ [Installation / Diagrams](#)


Flow resistance coefficient

ζ diagram for RL and RL-A louvers, depending on blade angle setting (angle of blades opening). Airflow velocity v [m/s] refers to the total cross-section area $A=B \times H$ [m²]

$$dp = (\zeta \cdot \rho \cdot v^2) / 2$$

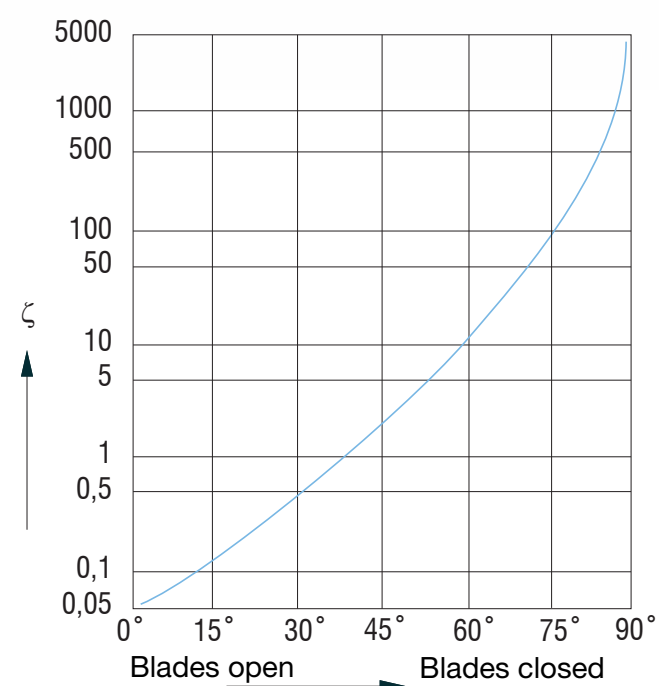

INSTALLATION

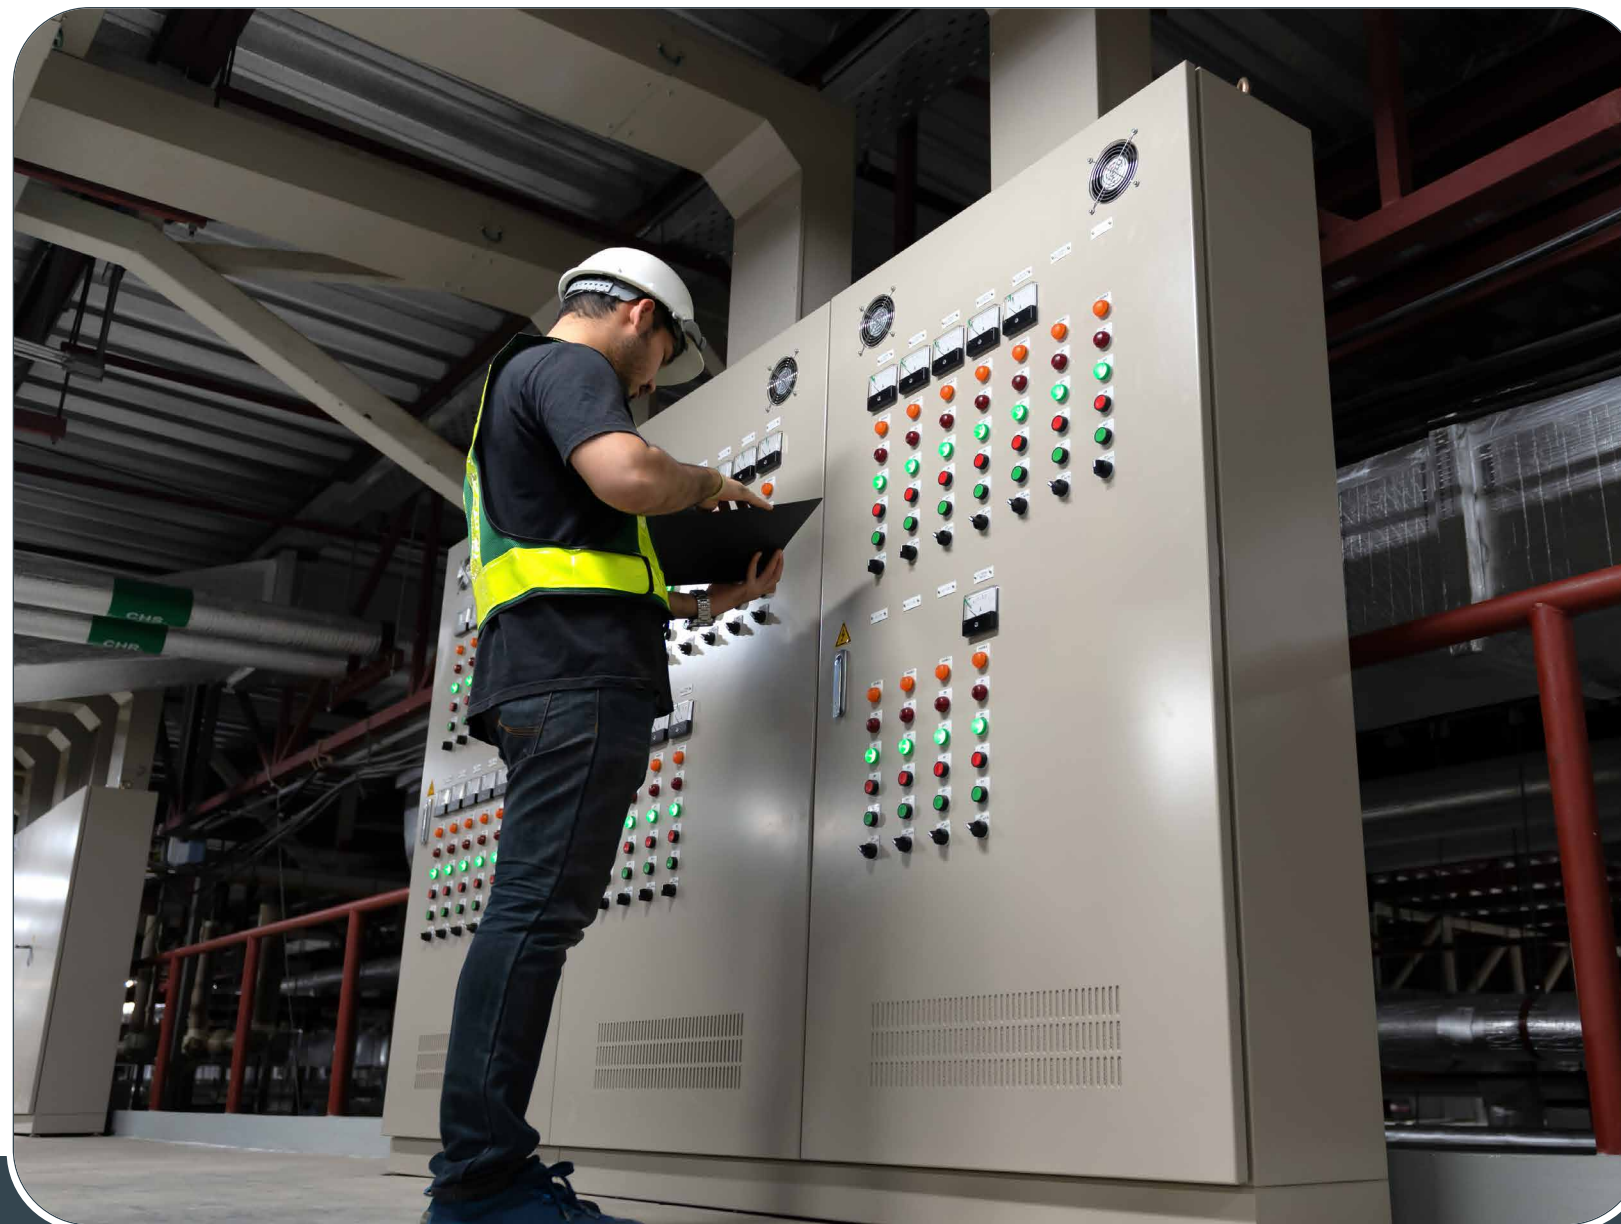

- ▼ [RL Product overview](#)
- ▼ [RL-A Product overview](#)
- ▼ [RL-R Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Actuators](#)
- ▼ [Installation / Diagrams](#)



TRANSPORT

After arrival, check the product for transport damage and shortcomings. In case of any damage or shortcomings, immediately contact your supplier.

STORAGE

If the louver is not installed immediately:

- Remove any wrapping.
- Protect louver from dust and contamination.
- Do not expose the louver to the effects of weather - store the louver in a dry place.
- Do not store the unit below -20 °C or above 50 °C.

Please properly dispose of packaging material!

MAINTENANCE AND OPERATION

Klimaoprema louvers are designed with fully enclosed drive mechanism outside of the duct and as such do not require cleaning and regular maintenance.

However, activation mechanism should be inspected for proper operation on regular basis.

- Provide at least one annual check of the regulation damper
- After each intervention, provide a systematic cleaning of dust and especially its movable plate
- Check the if the electrical terminals are tightened
- Cleaning instruction: clean with a sponge, with water or a mild detergent
- Disinfection instruction: spray disinfectant (disinfectant may contain alcohol which is flammable, take precaution to avoid ignition)

It is not permitted to alter the products in any way nor perform any changes to their structure without the manufacturer's consent.

The functional test must be carried out in compliance with the basic maintenance principles of the European norms.

COMMISSIONING

- Carefully unpack louver - be careful of sharp edges and do not use excessive force for unpacking
- Inspect the louver - check the regulation louver for damage
- Installation of the louver - according to the installation instructions
- Before commissioning - check the louver functions



AIRFLOW REGULATION

Images are for informational purposes only and may differ from the actual product.
Follow the latest versions of the catalog on the website.

-  Gradna 78A, 10430 Samobor, Croatia
-  +385 (0)1 33 62 513
-  info@klimaoprema.com
-  www.klimaoprema.com