



Product catalog


FDC

Fire damper

Fire protection

Version 1.1.1
Issue Date: 24.04.2026.

1. Gypsum layers
2. Intumescent strip
3. Cold smoke seal
4. Contact layer

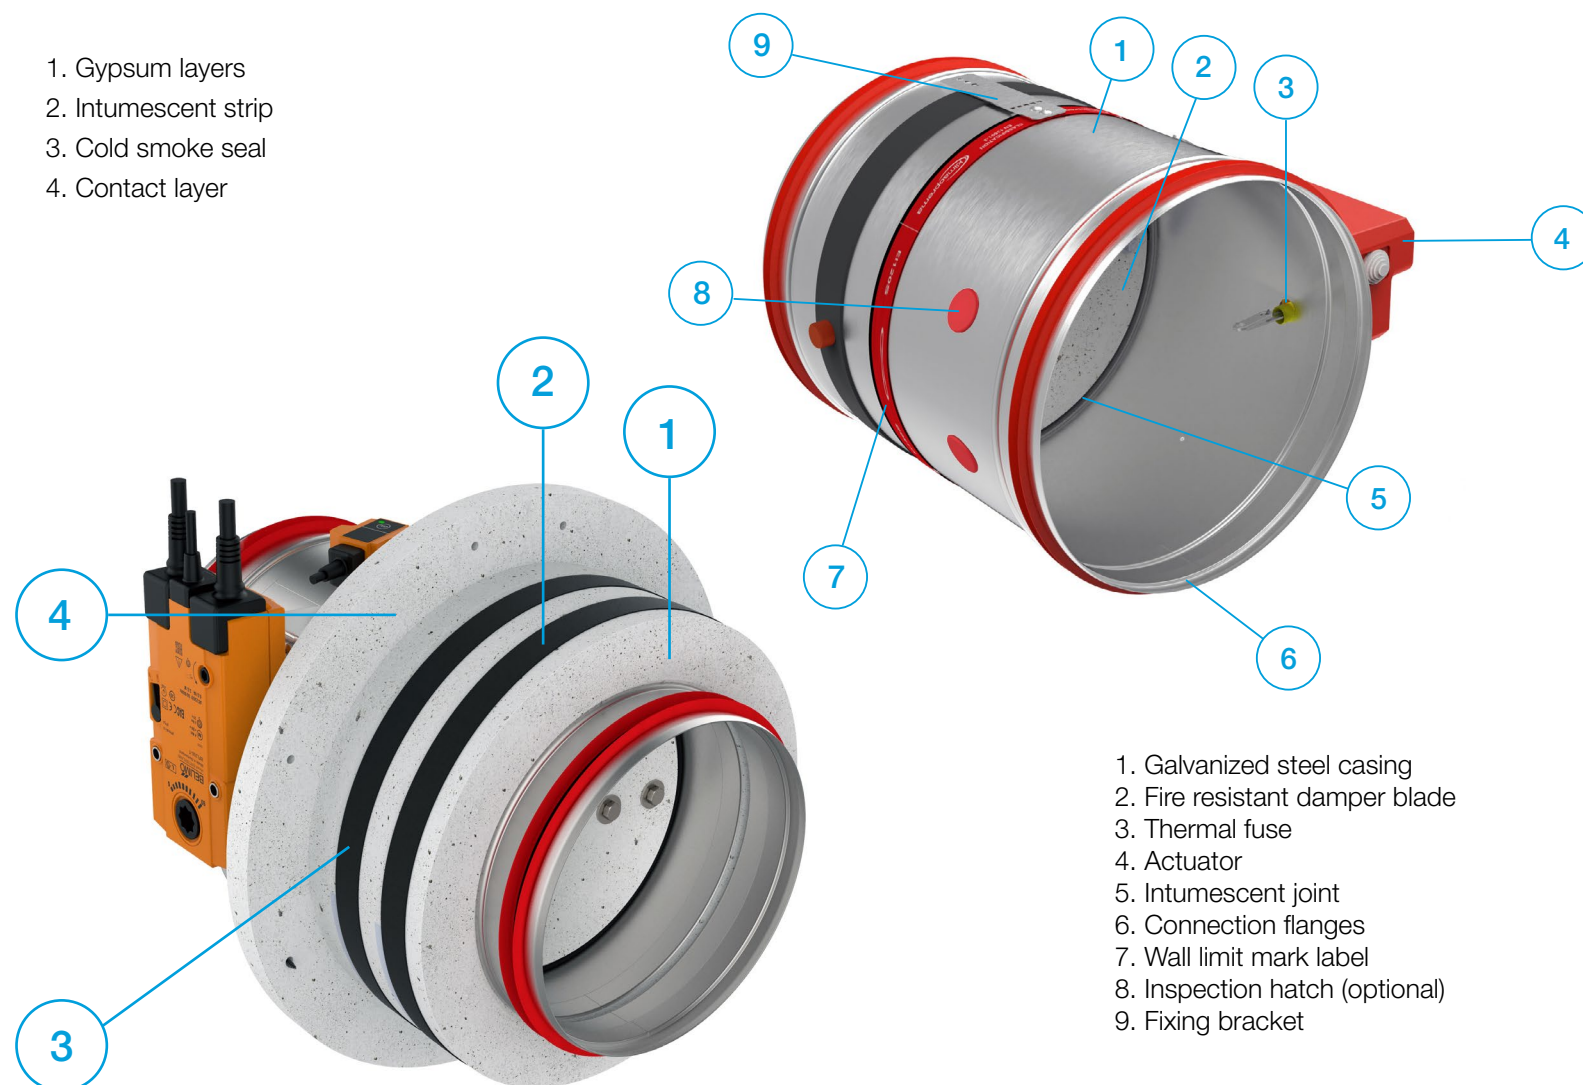

1. Galvanized steel casing
2. Fire resistant damper blade
3. Thermal fuse
4. Actuator
5. Intumescent joint
6. Connection flanges
7. Wall limit mark label
8. Inspection hatch (optional)
9. Fixing bracket

- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)



PRODUCT OVERVIEW

FIRE DAMPER - FDC

PRODUCT OVERVIEW

Fire dampers FDC are used for prevention of fire spread through the ventilation ducts and between fire sections. Fire dampers consist of steel sheet casing, calcium silicate damper blade, damper blade mechanism outside of the airflow and a manual, electromagnetic or electric actuator.

Fire damper casing is made out of galvanized steel sheet. Variants produced from stainless steel and powder coated steel are also available. Calcium silicate blade is equipped with brass bearings and seals made out of polyurethane and elastomer rubber.

Fire dampers FDC25 are produced up to size d315 and have 25 mm thick damper blade. Fire dampers FDC40 are produced in sizes from d355 till d800 and have 40 mm thick damper blade.

FDC25 fire dampers are equipped with R25 manual mechanism and FDC40 fire dampers are equipped with R40 manual mechanism.


Manual spring return mechanism is equipped with thermal fuse that is triggered automatically when the temperature inside the duct reaches 72 °C. It can also be activated manually by the push of the button on the mechanism. Additional equipment for manual mechanism include end contact switches for damper position signalling. Electromagnetic actuators feature spring return mechanism with electromagnet for remote activation. Additional equipment for electromagnetic mechanism include end contact switches for damper position signalling. Rearming of the electromagnetic actuator is manual.

Fire dampers with electric actuators are equipped with Belimo actuator drives in 24 V or 230 V versions. Activation of fire dampers equipped with electric drives can be via 72 °C or 95 °C thermal fuse or remotely via control signal. Rearming of the electric fire damper can also be done remotely via control signal. All electric actuators are equipped with end switches for position signalling.

ATEX rated versions of fire dampers can be delivered with Schischek 24 V / 230 V electric actuators that are rated for installation in explosive atmosphere areas.

All fire dampers are tested according to the EN 1751 for airtightness and retain class 3 leakage on the closed damper blade and class C on the casing air leakage.

* The images shown are for illustration purposes only and may not be an exact representation of the product.

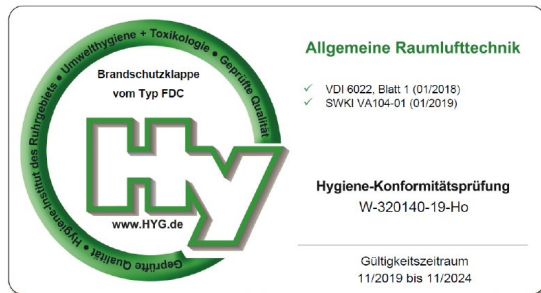

- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)



PRODUCT OVERVIEW

FIRE DAMPER - FDC

TESTS AND CERTIFICATES

All our dampers are submitted to a number of tests by official test institutes. Reports of these tests form the basis for the approvals of our dampers. Fire dampers are also suitable for installation in buildings with high hygienic demands such as hospitals, clinics and pharmaceutical areas.

To confirm this, our products are tested by an independent Institute of Hygiene, based in Gelsenkirchen, Ruhr, and comply with directives and guidelines in VDI 6022.

Our FDC damper contains an EPD certificate. EPD or Environmental Product Declaration is a document that transparently communicates the performance or impact on the environment of any product or material during its lifetime. The EPD is usually valid for five years and is produced according to the relevant standards. The EPD is made in accordance with EN 15804+A2 & ISO 14025/ ISO 21930. [FDC Environmental Product Declaration](#)



FIRE RESISTANCE CLASSIFICATION

FDC fire resistance is tested according to EN 1366-2 "Fire resistance tests for service installations- Part 2: Fire dampers". Classification of the fire dampers is defined according to EN 13501-3 Fire classification of construction products and building elements.

Installation in both, vertical and horizontal axis of rotation of the dampers blade is acceptable (with the axis angle 0 - 360°). Fire resistance of fire damper depends on classification of walls or ceilings. It is allowed to install products to walls or ceilings only according to products Declaration of Performance. Walls or ceilings with greater fire resistance can also be used. Fire damper should be installed according to the installation manual which can be found within this document.

Please consult latest Declaration of Performance:



www.klimaoprema.com/fdc

For more information about certificates, visit our website.

E - Integrity
I - Insulation
120/90/60 - Classification time in minutes
S - Smoke leakage
ve - Damper installed in vertical compartment
ho - Damper installed in horizontal compartment
i↔o - Fire performance criteria are met on both sides





TECHNICAL DATA

Fire damper casing is manufactured from galvanized steel sheet, but on demand can be produced out of:

- Galvanized steel and powder coated
 - Stainless steel EN 1.4301/EN 1.4404 (AISI 304/316L)
 - Stainless steel EN 1.4301/EN 1.4404 (AISI 304/316L) and powder coated
- ** Stainless steel not possible with MF1, MF2, Applique**

Fire damper for areas with potentially explosive atmospheres are also available



1

CLASS C EN1751

USER MANUALS

16

2

SERIAL NUMBER: 201623500700001

3

4

PRODUCTION DATE 11.03.2022

5

6

TYPE: FDC25 – d125 – R

7

8

DIMENSION: d125

LOCATION:

9

10

11

ACT. MECHANISM: R

IP PROTECTION: IP42

12

13

14

15

16

NOMINAL VOLTAGE: –

FREE SPACE (dm2): 0.87

17

18

19

SIGNALISATION No

THERMAL FUSE: 72°C

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

522

523

524

525

526

527

528

529

530

531

532

533

534

535

536

537

538

539

540

541

542

543

544

545

546

547

548

549

550

551

552

553

554

555

556

557

558

559

560

561

562

563

564

565

566

567

568

569

570

571

572

573

574

575

576

577

578

579

580

581

582

583

584

585

586

587

588

589

590

591

592

593

594

595

596

597

598

599

600

601

602

603

604

605

606

607

608

609

610

611

612

613

614

615

616

617

618

619

620

621

622

623

624

625

626

627

628

629

630

631

632

633

634

635

636

637

638

639

640

641

642

643

644

645

646

647

648

649

650

651

652

653

654

655

656

657

658

659

660

661

662

663

664

665

666

667

668

669

670

671

672

673

674

675

676

677

678

679

680

681

682

683

684

685

686

687

688

689

690

691

692

693

694

695

696

697

698

699

700

701

702

703

704

705

706

707

708

709

710

711

712

713

714

715

716

717

718

719

720

721

722

723

724

725

726

727

728

729

730

731

732

733

734

735

736

737

738

739

740

741

742

743

744

745

746

747

748

749

750

751

752

753

754

755

756

757

758

759

760

761

762

763

764

765

766

767

768

769

770

771

772

773

774

775

776

777

778

779

780

781

782

783

784

785

786

787

788

789

790

791

792

793

794

795

796

797

798

799

800

801

802

803

804

805

806

807

808

809

810

811

812

813

814

815

816

817

818

819

820

821

822

823

824

825

826

827

828

829

830

831

832

833

834

835

836

837

838

839

840

841

842

843

844

845

846

847

848

849

850

851

852

853

854

855

856

857

858

859

860

861

862

863

864

865

866

867

868

869

870

871

872

873

874

875

876

877

878

879

880

881

882

883

884

885

886

887

888

889

890

891

892

893

894

895

896

897

898

899

900

901

902

903

904

905

906

907

908

909

910

911

912

913

914

915

916

917

918

919

920

921

922

923

924

925

926

927

928

929

930

931

932

933

934

935

936

937

938

939

940

941

942

943

944

945

946

947

948

949

950

951

952

953

954

955

956

957

958

959

960

961

962

963

964

965

966

967

968

969

970

971

972

973

974

975

976

977

978

979

980

981

982

983

984

985

986

987

988

989

990

991

992

993

994

995

996

997

998

999

1000

1001

1002

1003

1004

1005

1006

1007

1008

1009

1010

1011

1012

1013

1014

1015

1016

1017

1018

1019

1020

1021

1022

1023

1024

1025

1026

1027

1028

1029

1030

1031

1032

1033

1034

1035

1036

1037

1038

1039

1040

1041

1042

1043

1044

1045

1046

1047

1048

1049

1050

1051

1052

1053

1054

1055

1056

1057

1058

1059

1060

1061

1062

1063

1064

1065

1066

1067

1068

1069

1070

1071

1072

1073

1074

1075

1076

1077

1078

1079

1080

1081

1082

1083

1084

1085

1086

1087

1088

1089

1090

1091

1092

1093

1094

1095

1096

1097

1098

1099

1100

1101

1102

1103

1104

1105

1106

1107

1108

1109

1110

1111

1112

1113

1114

1115

1116

1117

1118

1119

1120

1121

1122

1123

1124

1125

1126

1127

1128

1129

1130

1131

1132

1133

1134

1135

1136

1137

1138

1139

1140

1141

1142

1143

1144

1145

1146

1147

1148

1149

1150

1151

1152

1153

1154

1155

1156

1157

1158

1159

1160

1161

1162

1163

1164

1165

1166

1167

1168

1169

1170

1171

1172

1173

1174

1175

1176

1177

1178

1179

1180

1181

1182

1183

1184

1185

1186

1187

1188

1189

1190

1191

1192

1193

1194

1195

1196

1197

1198

1199

1200

1201

1202

1203

1204

1205

1206

1207

1208

1209

1210

1211

1212

1213

1214

1215

1216

1217

1218

1219

1220

1221

1222

1223

1224

1225

1226

1227

1228

1229

1230

1231

1232

1233

1234

1235

1236

1237

1238

1239

1240

1241

1242

1243

1244

1245

1246

1247

1248

1249

1250

1251

1252

1253

1254

1255

1256

1257

1258

1259

1260

1261

1262

1263

1264

1265

1266

1267

1268

1269

1270

1271

1272

1273

1274

1275

1276

1277

1278

1279

1280

1281

1282

1283

1284

1285

1286

1287

1288

1289

1290

1291

1292

1293

1294

1295

1296

1297

1298

1299

1300

1301

1302

1303

1304

1305

1306

1307

1308

1309

1310

1311

1312

1313

1314

1315

1316

1317

1318

1319

1320

1321

1322

1323

1324

1325

1326

1327

1328

1329

1330

1331

1332

1333

1334

1335

1336

1337

1338

1339

1340

1341

1342

1343

1344

1345

1346

1347

1348

1349

1350

1351

1352

1353

1354

1355

1356

1357

1358

1359

1360

1361

1362

1363

1364

1365

1366

1367

1368

1369

1370

1371

1372

1373

1374

1375

1376

1377

1378

1379

1380

1381

1382

1383

1384

1385

1386

1387

1388

1389

1390

1391

1392

1393

1394

1395

1396

1397

1398

1399

1400

1401

1402

1403

1404

1405

1406

1407

1408

1409

1410

1411

1412

1413

1414

1415

1416

1417

1418

1419

1420

1421

1422

1423

1424

1425

1426

1427

1428

1429

1430

1431

1432

1433



MODELS

Casings

FDC25
Cylindrical fire damper with 25 mm damper blade and fire classification up to EI120S. Sizes range from d100 till d315.

FDC40
Cylindrical fire damper with 40 mm damper blade and fire classification up to EI120S. Sizes range from d355 till d800.

FDC25 - APP
Cylindrical fire damper with integrated Applique installation frame with 25 mm damper blade and fire classification up to EI90S. Sizes range from d100 till d315.

FDC25 - MF1/MF2
Cylindrical fire damper with integrated MF1 installation frame with 25 mm damper blade and fire classification up to EI60S. Sizes range from d100 till d315.

FDC40 - MF2
Fire damper with integrated MF2 installation frame with 40 mm damper blade and fire classification up to EI90S. Sizes range from d355 till d800.



- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

PRODUCT OVERVIEW

FIRE DAMPER - FDC

Actuators

R (R-S)
Manual operating mechanism, optionally with end switches (R-S). In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermal fuse melting, or by manual activation on the operating mechanism. Upon closure, damper blade is locked in closed position and can only be opened manually. Thermal fuse melting point is 72 °C.

EMS-S
Electromagnetic operating mechanism, comes with end switches as standard. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermal fuse melting or remotely by triggering the electromagnet. Electromagnet is constantly under power and activates closing of the damper blade in case the power cuts out. Upon closure, damper blade is locked in closed position and can only be opened manually. Thermal fuse melting point is 72 °C.

M230-S/M230-S-ST
Belimo 230 V electro motor operating mechanism, comes with integrated end switches. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermoelectric release device or remotely by triggering the electro motor. Upon closure, damper blade is locked in closed position and can be opened by sending a signal to

electro motor. Standard thermoelectric release point is 72 °C, optional 95 °C. M230-S-ST actuator is additionally equipped with connection plug for easy connection with power supply and communication modules.

M24-S/ M24-S-ST
Belimo 24 V electro motor operating mechanism, comes with integrated end switches. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermoelectric release device or remotely by triggering the electro motor. Upon closure, damper blade is locked in closed position and can be opened by sending a signal to electro motor. Standard thermoelectric release point is 72 °C, optional 95 °C. M24-S-ST actuator is additionally equipped with connection plug for easy connection with power supply and communication modules.

EX
ATEX rated fire dampers are equipped with Schischek ExMax-5.10-BF actuators, ExPro-TT thermal switches and ExBox-BF plenum boxes. Optional casing can be produced in AISI 316 stainless steel.

Ordering key

(1) Damper type (2) Dimension (3) Mechanism type (4) Mounted accessories

FDC25	-	d250	-	M230-S	-	IH
(1)	FDC25 - d100 to d315 FDC40 - d355 to d800 FDC25-APP - d100 to d315 FDC25-MF1 - d100 to d315 FDC25-MF2 - d100 to d315 FDC40-MF2 - d355 to d800					(3) R - manual drive R-S - manual drive with limit switches M230-S - electric actuator AC/DC 230 V M24-S - electric actuator AC/DC 24 V M24-S-ST - electric actuator AC/DC 24 V with connection plug EMS-S - electromagnetic drive EX - electric actuator Schischek ExMax -5.10-BF +ExPro-TT+ExBox-BF
(2)	Damper diameter d100 till d800					(4) IH - inspection hatch

FDC25/FDC40 - R (manual mechanism)

- Automatic closure when the temperature in the duct exceeds 72 °C
- Manual rearming
- Manual unlocking possible for periodical test of fire damper
- Optional with end position switches (-R-S)
- FDC25 fire dampers are equipped with R25 manual mechanism
- FDC40 fire dampers are equipped with R40 manual mechanism



- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

	FDC25-R							FDC40-R						
Ød [mm]	100	125	160	200	250	315	355	400	450	500	560	630	710	800
Weight [kg]	3,8	4,2	4,7	5,4	6,3	7,7	11,9	13,5	15,4	17,5	20,4	23,6	27,7	33,7
K [mm]	120	128	140	155	176	204	221	242	265	289	317	351	389	433




*K - Dimension of the minimum installation opening

DIMENSIONS

FIRE DAMPER - FDC

FDC25-R25 (up to d315)

FDC40-R40 (d355 up to d800)

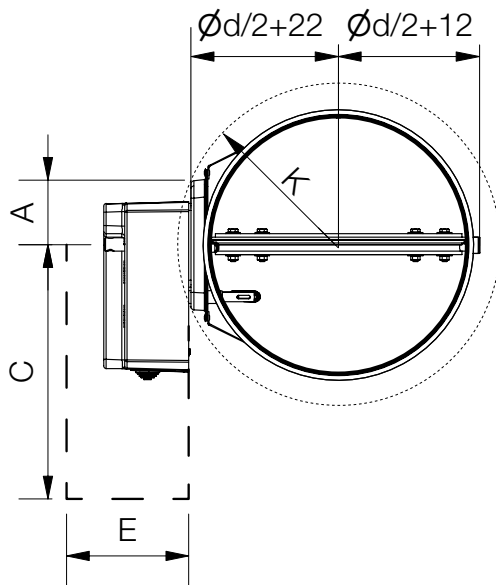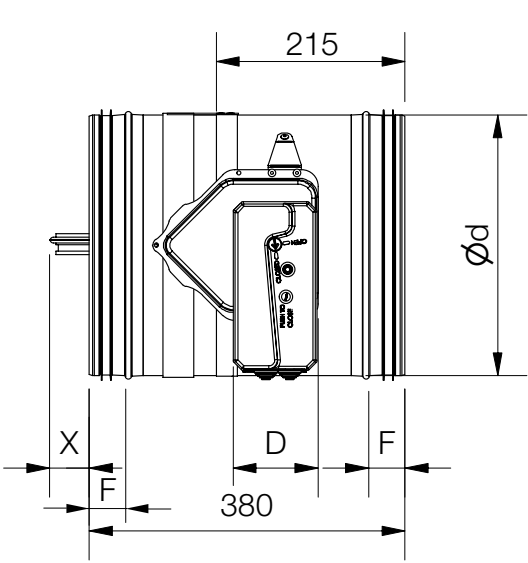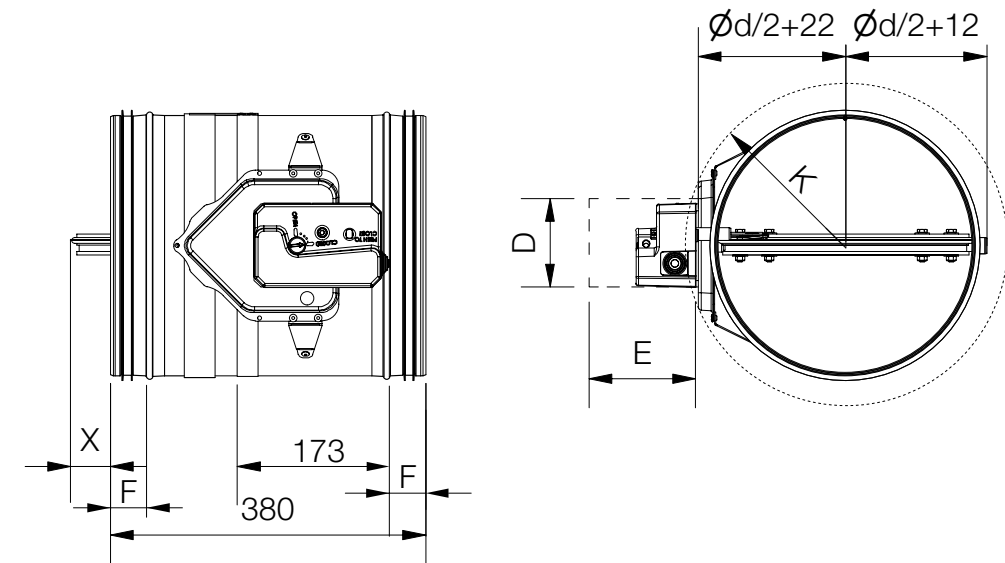

Product	A [mm]	C [mm]	D [mm]	E [mm]	F [mm]
FDC 25	55	150	105	150	42
FDC 40	55	200	105	200	42

Length of damper blade outside of casing
(X dimension on front side):

$X=(\text{Ød}/2)-110 \text{ [mm]}$

*If the damper is larger than Ø540, use formula
(Y dimension on back side):

$Y=(\text{Ød}/2)-270 \text{ [mm]}$

FDC25/FDC40 - EMS (solenoid actuator)

- Electromagnetic actuator with integrated limit switches and thermal fuse release mechanism (72 °C)
- Manual rearming
- Remote closing with electromagnetic actuator
- Manual closing possible
- EMS - solenoid actuator is constantly under power. Actuating mechanism is tripped when the power is interrupted, or thermal fuse is melted.




- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

	FDC25-EMS							FDC40-EMS						
Ød [mm]	100	125	160	200	250	315	355	400	450	500	560	630	710	800
Weight [kg]	5,3	5,7	6,2	6,9	7,8	9,2	12,2	13,8	15,7	17,8	20,7	23,9	28	34
K [mm]	120	128	140	155	176	204	221	242	265	289	317	351	389	433

*K - Dimension of the minimum installation opening

DIMENSIONS

FIRE DAMPER - FDC

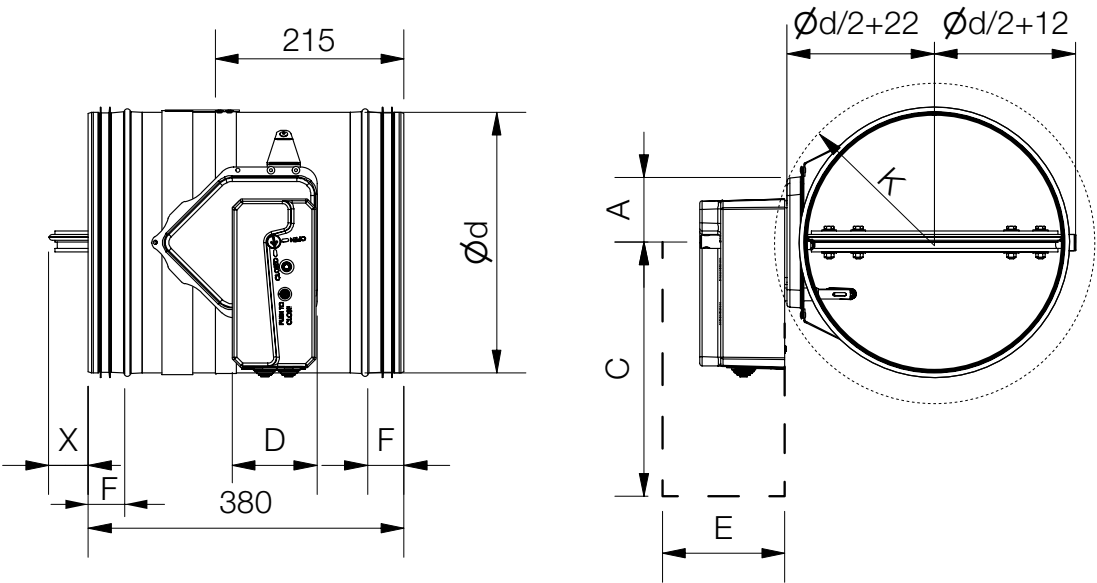

Product	A [mm]	C [mm]	D [mm]	E [mm]	F [mm]
FDC 25	55	150	105	150	42
FDC 40	55	200	105	200	42

Length of damper blade outside of casing
(X dimension on front side):

$X=(\text{Ød}/2)-110 \text{ [mm]}$

*If the damper is larger than Ø540, use formula
(Y dimension on back side):

$Y=(\text{Ød}/2)-270 \text{ [mm]}$

FDC25/FDC40 - M (electric actuator)

- Thermoelectric release device (72 °C) with electric actuator and return spring
- Integrated end switches
- Fully automatic operation
- Optional 95 °C thermoelectric release device for warm air installations




- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

	FDC25-M						FDC40-M							
Ød [mm]	100	125	160	200	250	315	355	400	450	500	560	630	710	800
Weight [kg]	4,5	4,9	5,4	6,1	7	8,4	11,7	13,3	15,2	17,3	20,2	23,4	29,1	35,1
Actuator type	BFL	BFL	BFL	BFL	BFL	BFL	BFN	BFN	BFN	BFN	BFN	BFN	BF	BF
K [mm]	120	128	140	155	176	204	221	242	265	289	317	351	389	433

*K - Dimension of the minimum installation opening

DIMENSIONS

FIRE DAMPER - FDC

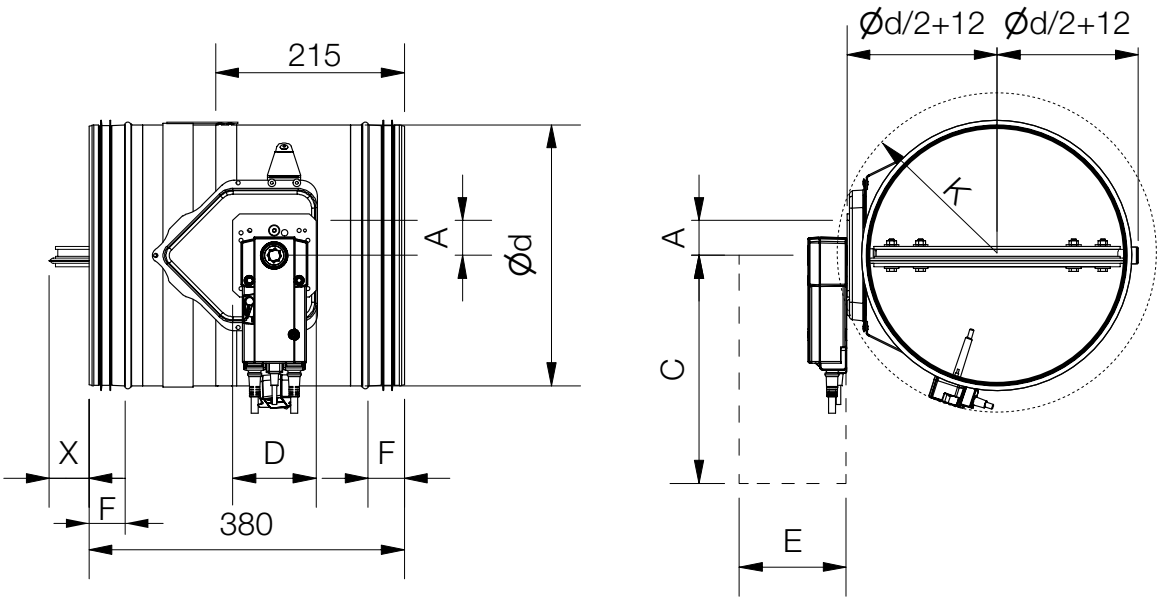

Product	A [mm]	C [mm]	D [mm]	E [mm]
BFL (M)	25	200	90	120
BFN (M)	25	225	100	120
BF (M)*	50	250	100	120

Product	F [mm]
FDC 25	42
FDC 40	42

Length of damper blade outside of casing
(X dimension on front side):

$X=(\text{Ød}/2)-110$ [mm]


*If the damper is larger than Ø540, use formula
(Y dimension on back side):

$Y=(\text{Ød}/2)-270$ [mm]

FDC25/FDC40 - EX (electric actuator)

- Thermoelectric release device (72 °C) with electric actuator and return spring
- Integrated end switches
- Fully automatic operation
- The EX version of the damper comes with:
 - 1) Safety temperature trigger Schischek ExPro-TT
 - 2) Electric actuator Schischek ExMax-5.10-BF
 - 3) Terminal box Schischek ExBox-BF

For more information see [page 43](#).

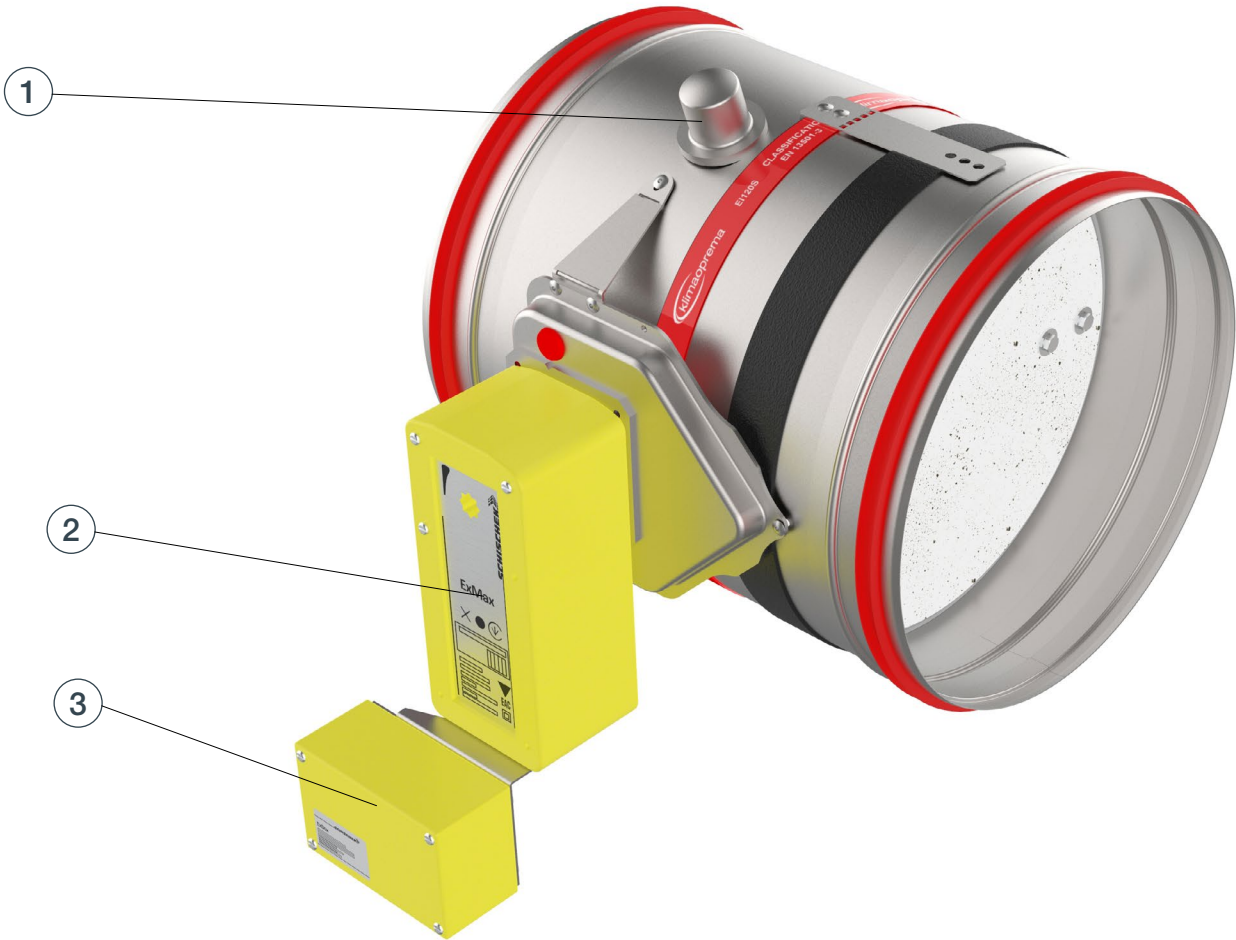

FDC25-EX							FDC40-EX							
Ød [mm]	100	125	160	200	250	315	355	400	450	500	560	630	710	800
Weight [kg]	7,9	8,3	8,8	9,5	10,4	11,8	14,8	16,4	18,3	20,4	23,1	26,5	30,6	36,6
Actuator type	ATEX rated Schischek 24/230 V electric actuator+ExPro-TT+ExBox-BF													
K [mm]	120	128	140	155	176	204	221	242	265	289	317	351	389	433

*K - Dimension of the minimum installation opening

DIMENSIONS

Ex classification of product:


II 2G Ex h IIC T6 Gb

II 2D Ex h IIIC T80°C Db

For more information about Ex classification, visit website: [ATEX classification!](#)

Type Examination Certificate Number: FIDI 21 ATEX D059. Equipment complies with the essential health and safety requirements relating to the design and construction of equipment intended to use in potentially explosive atmospheres given in annex VIII of the directive ATEX 2014/34/EU.

Please consult latest Declaration of conformity on our website:
www.klimaoprema.comDoc

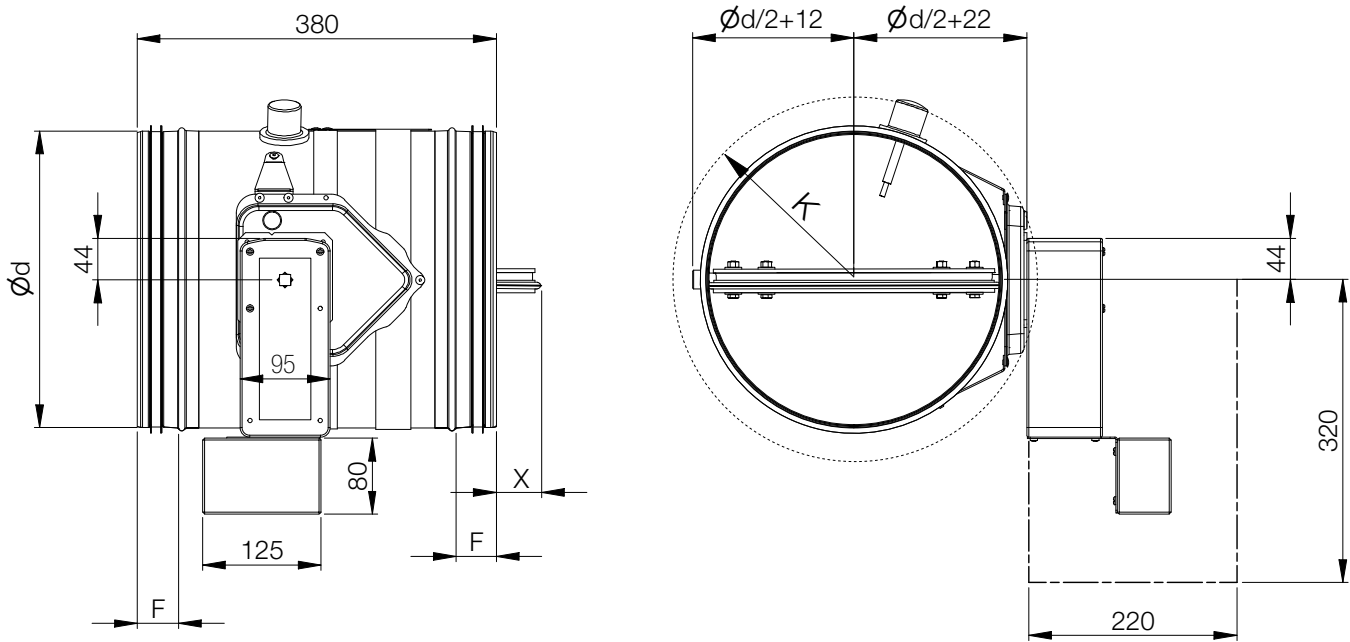

Model	F [mm]
FDC 25	42
FDC 40	42

Length of damper blade outside of casing
(X dimension on front side):

$$X=(\text{Ød}/2)-110 \text{ [mm]}$$

*If the damper is larger than Ø540, use formula
(Y dimension on back side):

$$Y=(\text{Ød}/2)-270 \text{ [mm]}$$

- ▶ [PRODUCT OVERVIEW](#)
- ▶ [DIMENSIONS](#)
- ▶ [INSTALLATIONS](#)
- ▶ [ACTUATORS](#)
- ▶ [ACCESSORIES](#)
- ▶ [MAINTENANCE AND OPERATION](#)

FIRE DAMPER - FDC

FDC25 - APP

Applique installation frame

- Applique kit is an installation subframe for quick and easy installation in rigid and flexible walls
- Made out of calcium silicate boards
- Quick wall mounting with screws
- Factory assembled to the fire damper

Damper diameter Ød[mm]	Applique frame diameter Ød + A [mm]
100	Ød +105 mm
125 - 160	Ød + 95 mm
200 - 315	Ød + 80 mm




- ▶ [PRODUCT OVERVIEW](#)
- ▶ [DIMENSIONS](#)
- ▶ [INSTALLATIONS](#)
- ▶ [ACTUATORS](#)
- ▶ [ACCESSORIES](#)
- ▶ [MAINTENANCE AND OPERATION](#)

	FDC25-APP-R						FDC25-APP-EMS						FDC25-APP-M					
Ød [mm]	100	125	160	200	250	315	100	125	160	200	250	315	100	125	160	200	250	315
Weight [kg]	6,2	6,7	7,8	8,5	10,1	12,3	7,7	8,2	9,3	10	11,6	13,8	6,9	7,4	8,5	9,2	10,8	13


↑ DIMENSIONS

FIRE DAMPER - FDC


FDC25-APP-R

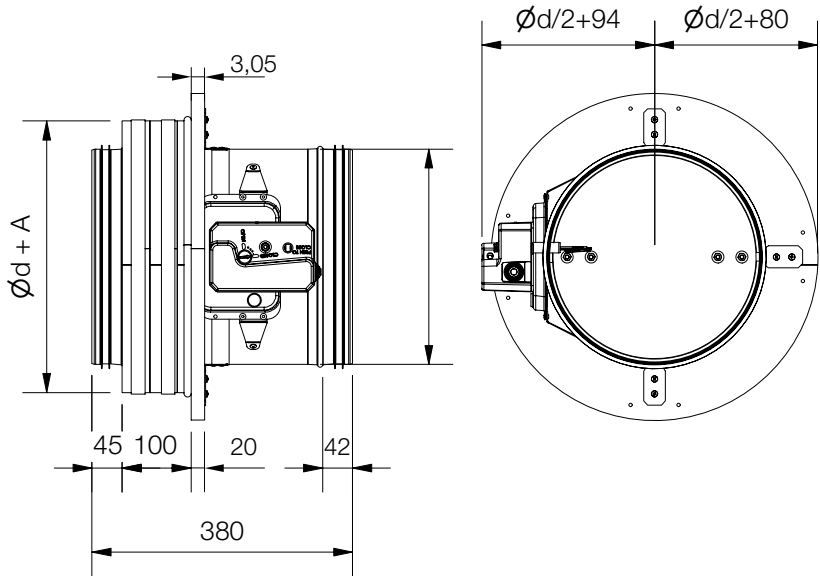

FDC25-APP-EMS

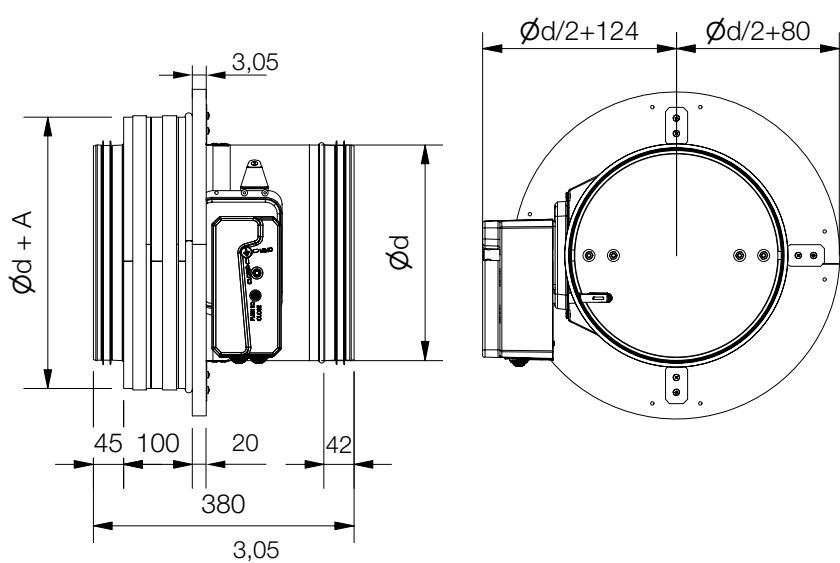


FDC25-APP-M

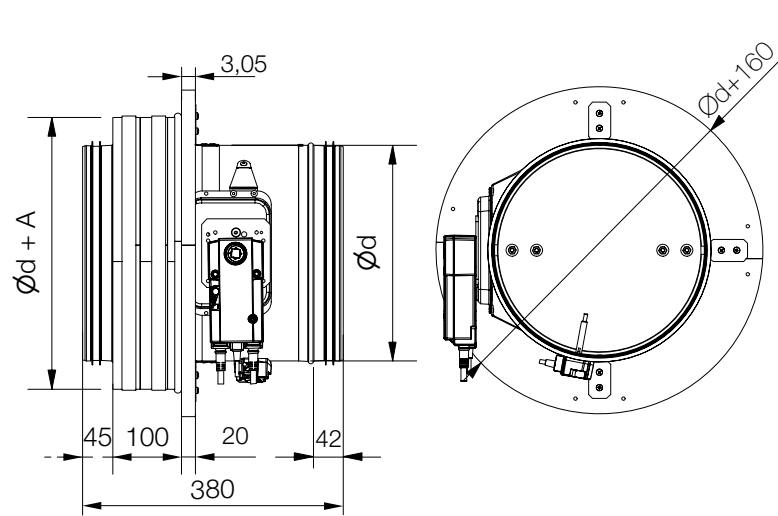

FDC25 - MF1

MF1 installation frame

- MF1 is an installation frame for quick and easy installation in rigid and flexible walls
- Made out of calcium silicate boards
- Quick wall mounting with screws
- Factory assembled to the fire damper

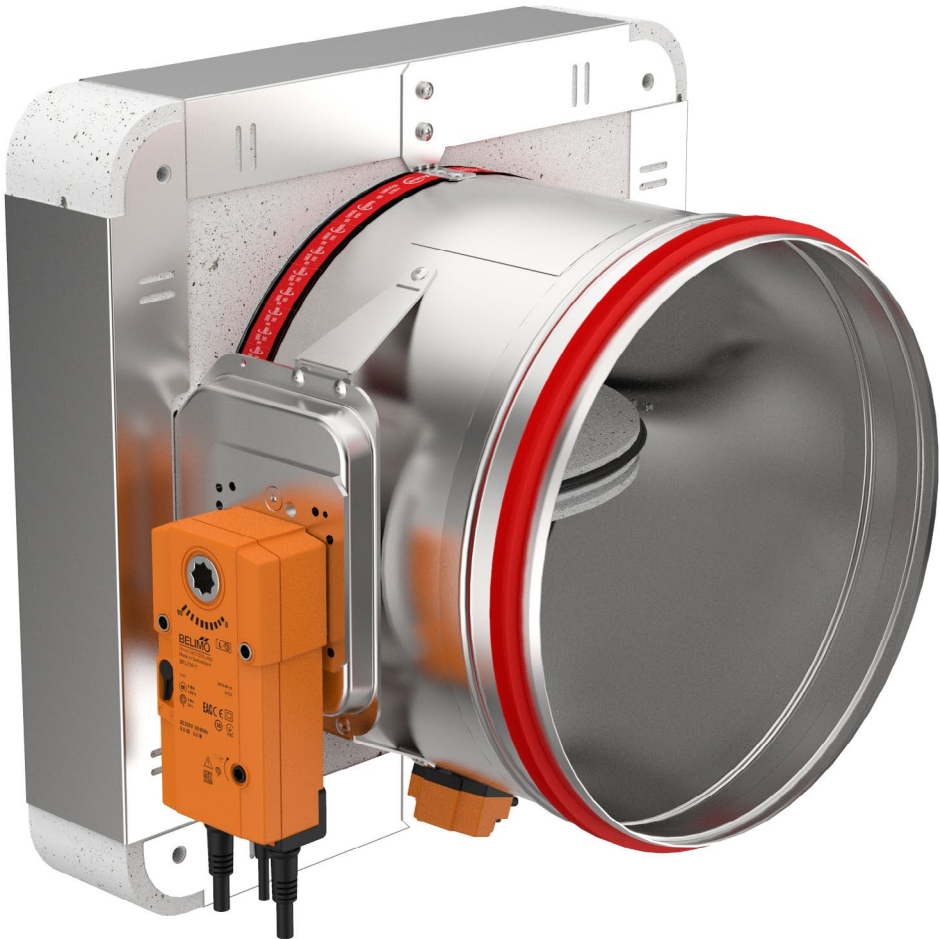


- ▶ [PRODUCT OVERVIEW](#)
- ▶ [DIMENSIONS](#)
- ▶ [INSTALLATIONS](#)
- ▶ [ACTUATORS](#)
- ▶ [ACCESSORIES](#)
- ▶ [MAINTENANCE AND OPERATION](#)

	FDC25-MF1-R						FDC25-MF1-EMS						FDC25-MF1-M					
Ød [mm]	100	125	160	200	250	315	100	125	160	200	250	315	100	125	160	200	250	315
Weight [kg]	6,6	7,4	8,7	10,3	12,5	15,5	8,1	8,9	10,2	11,8	14	17	7,3	8,1	9,4	11	13,2	16,2


DIMENSIONS

FIRE DAMPER - FDC


FDC25-MF1-R

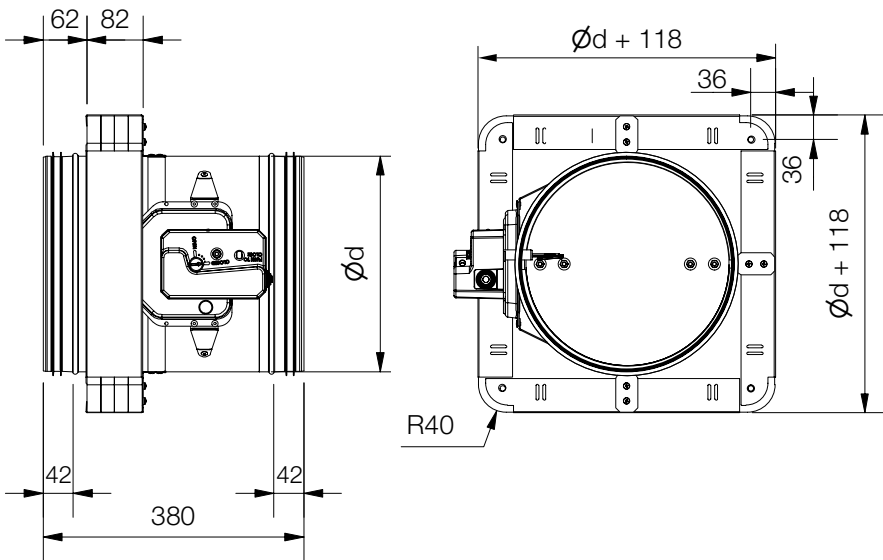

FDC25-MF1-EMS

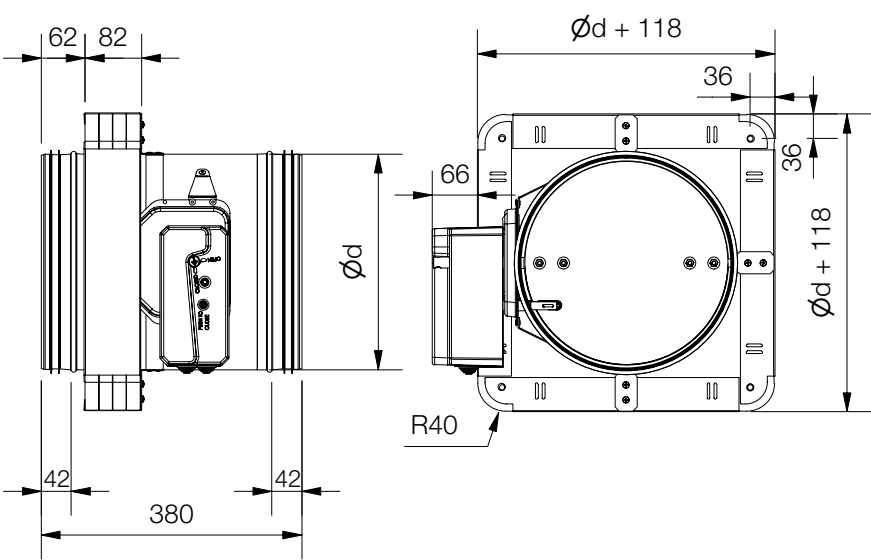

FDC25-MF1-M

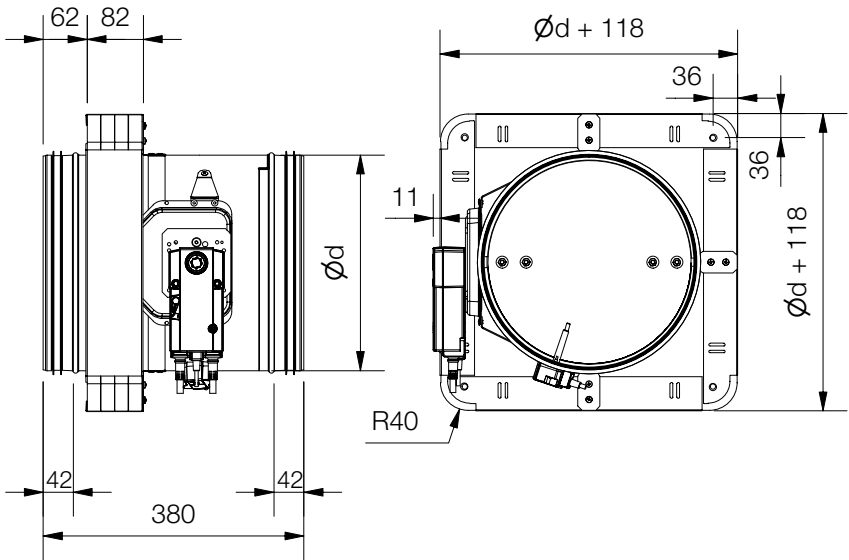

FDC25 - MF2

MF2 installation frame

- MF2 is an installation frame for quick and easy installation in rigid and flexible walls
- Made out of calcium silicate boards
- Quick wall mounting with screws
- Factory assembled to the fire damper
- FD25-MF2 possible only for shaft wall installations!




- ▶ [PRODUCT OVERVIEW](#)
- ▶ [DIMENSIONS](#)
- ▶ [INSTALLATIONS](#)
- ▶ [ACTUATORS](#)
- ▶ [ACCESSORIES](#)
- ▶ [MAINTENANCE AND OPERATION](#)

	FDC25-MF2-R						FDC25-MF2-EMS						FDC25-MF2-M					
Ød [mm]	100	125	160	200	250	315	100	125	160	200	250	315	100	125	160	200	250	315
Weight [kg]	7,1	8,1	9,6	11,4	13,8	17,2	8,6	9,6	11,1	12,9	15,3	18,7	7,8	8,8	10,3	12,1	14,5	17,9

DIMENSIONS

FIRE DAMPER - FDC

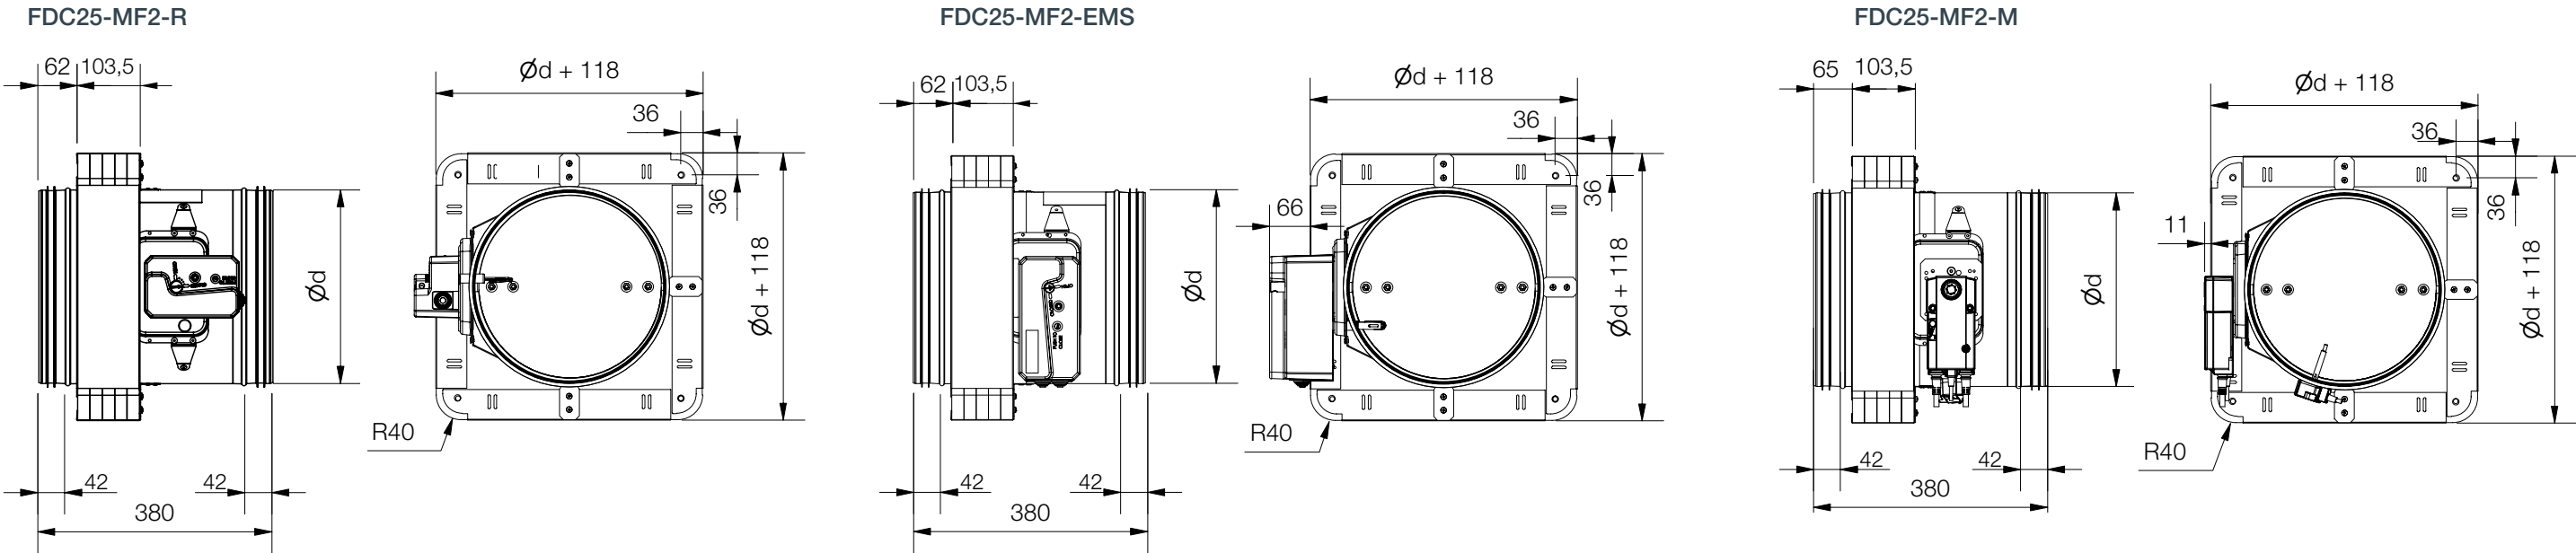

FDC40 - MF2

MF2 installation frame

- MF2 is an installation frame for quick and easy installation in rigid and flexible walls
- Made out of calcium silicate boards
- Quick wall mounting with screws
- Factory assembled to the fire damper
- FD25-MF2 possible only for shaft wall installations!




- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

	FDC40-MF2-R							FDC40-MF2-EMS							FDC40-MF2-M						
Ød [mm]	355	400	450	500	560	630	800	355	400	450	500	560	630	800	355	400	450	500	560	630	800
Weight [kg]	22,8	25,9	29,6	33,6	39,1	45	62,8	23,1	26,2	29,9	33,9	39,5	45,3	63,1	22,6	25,7	29,4	33,4	39	44,8	64,2


DIMENSIONS

FIRE DAMPER - FDC

FDC40-MF2-R / FDC40-MF2-EMS

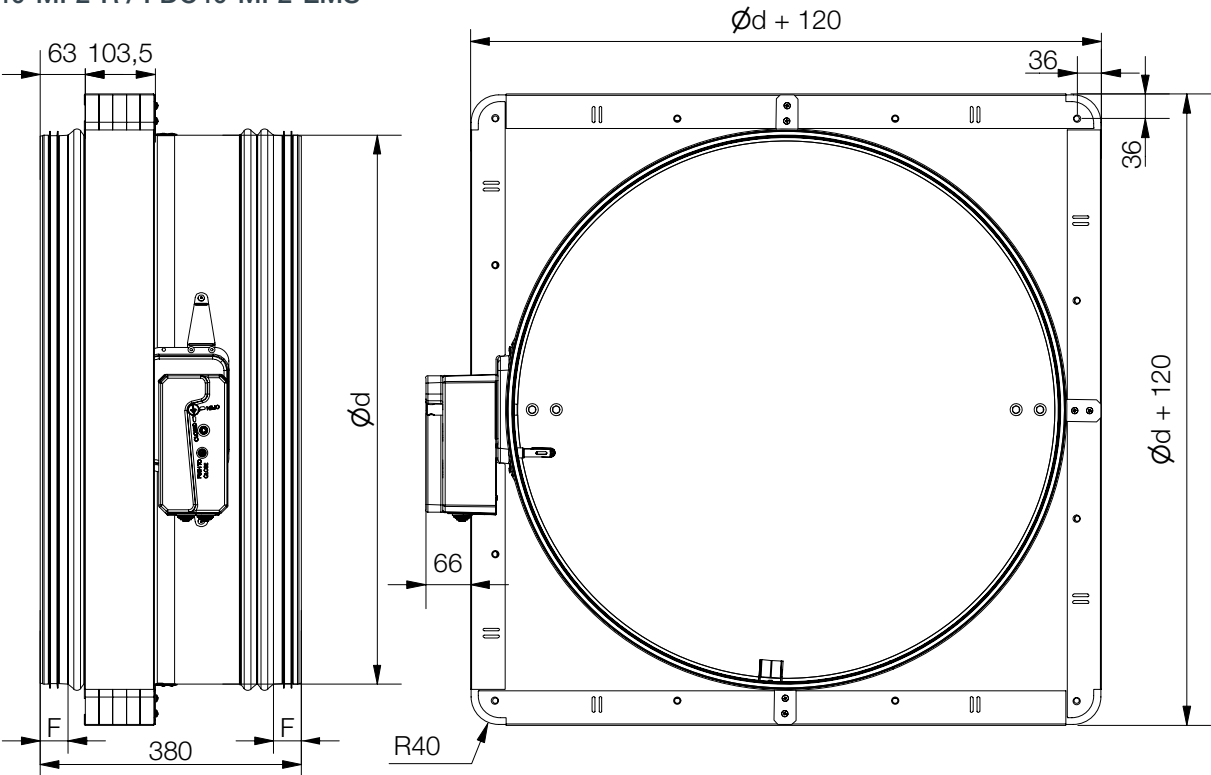

FDC40-MF2-M

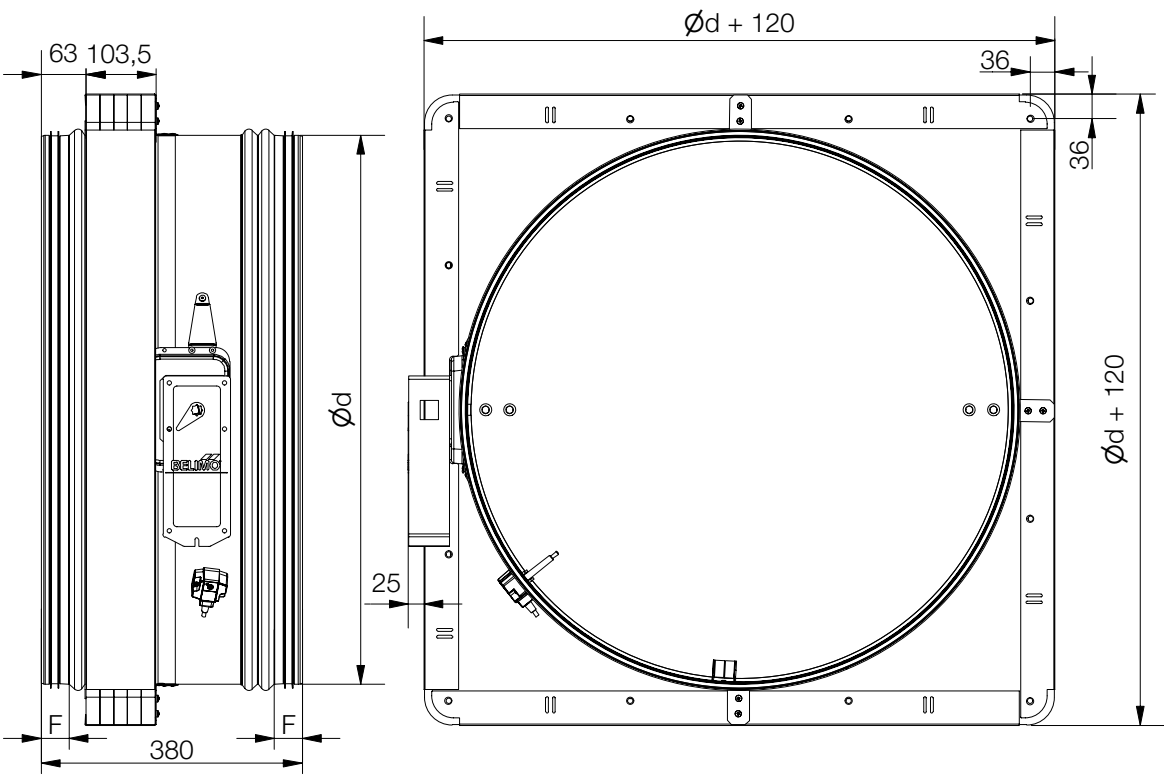

Product	F [mm]
FDC 25	42
FDC 40	42

INSTALLATION

The FDC25/FDC40 fire damper is always tested in standardized support frames (both in a rigid wall and in a flexible wall) in accordance with EN 1366-2: 2015 table 3/4/5. The results obtained are valid for all similar support frames which have a thickness and/or density and/or fire resistance similar or greater than the one on the test.

The duct connected to the fire damper must be supported or hung in such a way that the damper does not carry its weight. The damper must not support any part of the surrounding construction or wall which could cause damage and consequent damper failure. It is recommended to connect the damper to a flexible connection on either end of the damper.



- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

INSTALLATION

The damper driving mechanism can be placed on either side of the wall, however it needs to be placed so that it ensures an easy access during inspection.

- Mounting is possible with the blade axis in horizontal or in vertical position
- The installation must comply with the tests that were performed during certification
- Avoid any obstruction of the moving blade by the connected ducts
- The class of air-tightness is maintained in case the installation of the damper is made in accordance with the technical manual
- Operating temperature: 50 °C max
- For indoor use only

Installation in both, vertical and horizontal axis of rotation of the dampers blade is acceptable (with the axis angle 0 - 360°).

The fire damper must be installed into a fire partition structure in such a way that the damper blade in its closed position is located inside this structure (except for Applique/ MF1/ MF2 kit installations).

The recommended / maximum installation opening is in the table below. The smallest installation opening is where there is enough space to install the seal!


Recommended opening dimensions:

Damper size - Ød [mm]	Gap size - GS (Recommended)	Opening size - (Recommended)
100	55 mm	110 mm
125	52,5 mm	105 mm
160	47,5 mm	95 mm
200	45 mm	90 mm
250	42,5 mm	85 mm
315	40 mm	80 mm
355	40 mm	80 mm
400	37,5 mm	75 mm
450	37,5 mm	75 mm
500	35 mm	70 mm
560	35 mm	70 mm
630	35 mm	70 mm
710	32,5 mm	65 mm
800	32,5 mm	65 mm

Assembly aid / Installation depth


To help you find the suspension plane, a bendable fixing bracket is provided on the damper body (**the use of bendable fixing brackets is not required to meet the classification but they need to be bent up or broken in case they are not used. They must not stay in flat position.**)

and the red tape is placed on the casing to mark the location of the wall/ceiling limit (**distance from wall/ceiling limit to the end of fire damper is 215 mm**). This does not apply for Applique/ MF1/MF2 kit installations. **Check the operation of the fire damper before commencing the installation!**

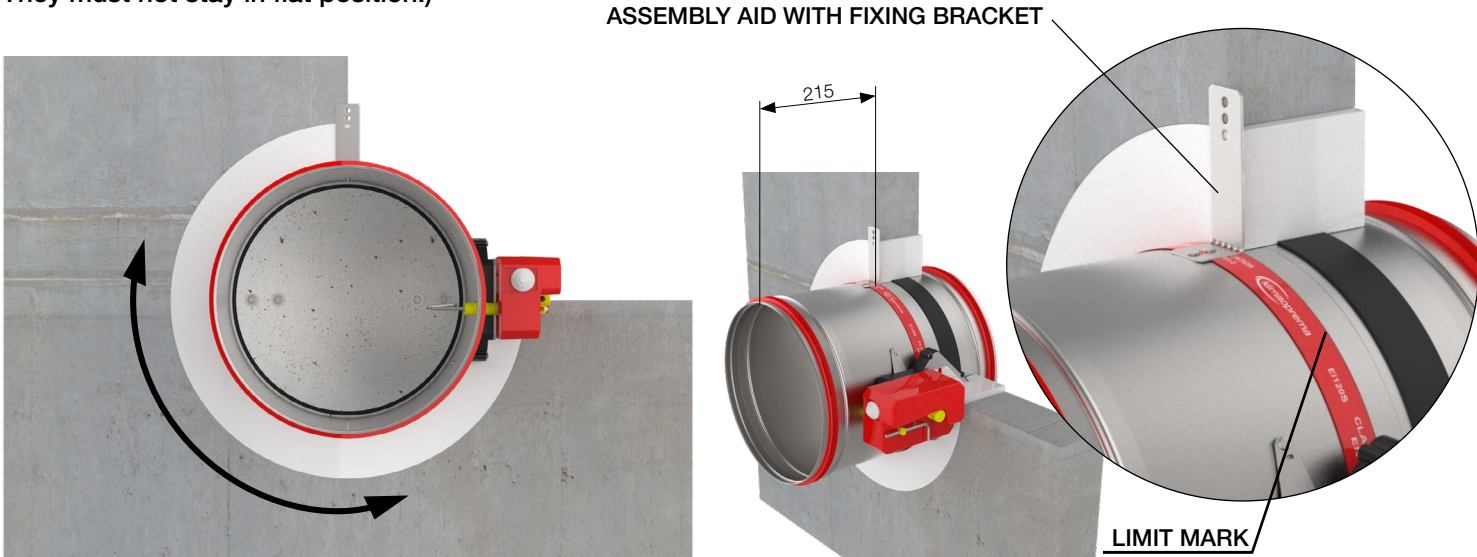

Standard actuator positions


FDC25 ELECTRIC ACTUATOR

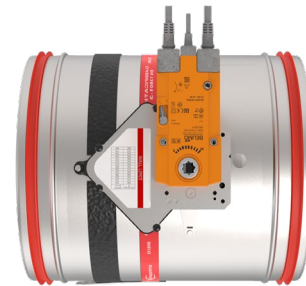

FDC-R25 MANUAL ACTUATOR



FDC40 ELECTRIC ACTUATOR

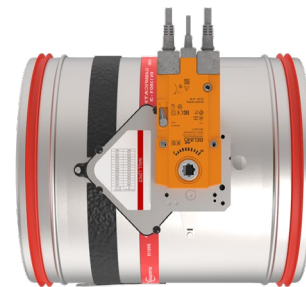

FDC-R40/EMS MANUAL ACTUATOR



FDC EX ACTUATOR



FDC-R40/EMS ACTUATOR
(Ød < 316)



-  [PRODUCT OVERVIEW](#)
-  [DIMENSIONS](#)
-  [INSTALLATIONS](#)
-  [ACTUATORS](#)
-  [ACCESSORIES](#)
-  [REPLACEMENTS](#)
-  [MAINTENANCE AND OPERATION](#)

FIRE DAMPER - FDC

Range	Supporting construction	Type of installation	Classification	Supporting construction details	Wall thickness	Tested underpressure
FDC25 d100-d315 mm / FDC40 d355-d800 mm	Rigid wall	 Gypsum plaster / Mortar	EI 120 (ve i↔o)S	Aerated concrete (≥ 450kg/m³) Reinforced concrete (≥ 2200kg/m³)	≥ 100 mm	500Pa
		 Mineral wool and cover boards	EI 90 (ve i↔o)S			500Pa
		 Fire Batt/ Weichschott				300Pa
		 Gypsum plaster / Mortar and cover boards	EI 120 (ve i↔o)S			Gypsum blocks (≥ 995kg/m³)
	Flexible wall	 Gypsum plaster / Mortar	A: FDC 25 EI 90 (ve i↔o)S A: FDC 40 EI 120 (ve i↔o)S B: EI 60 (ve i↔o)S	A: Plasterboard type F (EN520), mineral wool up to 115 kg/m³ B: Plasterboard type A (EN520), mineral wool up to 60 kg/m³	≥ 100 mm	300Pa
		 Gypsum plaster / Mortar and cover boards	A: EI 120 (ve i↔o)S B: EI 60 (ve i↔o)S			500Pa
		 Mineral wool and cover boards	A: EI 90 (ve i↔o)S B: EI 60 (ve i↔o)S			500Pa
		 Fire Batt/ Weichschott	A: EI 90 (ve i↔o)S B: EI 60 (ve i↔o)S			300Pa
		 Fire Batt/ Weichschott	EI 45 (ve i↔o)S	Plasterboard type F (EN520), mineral wool up to 115 kg/m³	≥ 75 mm	300Pa
		 Fire Batt/ Weichschott	EI 90 (ve i↔o)S	Cross laminated timber (30+40+30 mm) (480 kg/m³)	≥ 100 mm	300Pa
		 Eurobond Firemaster Extra	FDC25:EI 60 (i↔o)S FDC40: EI 60 S/ E 90 S (i↔o)S	Mineral wool (≥ 23 kg/m³)		300Pa
	Flexible wall + Rigid wall + Sliding ceiling	 Gypsum plaster / Mortar + Mineral wool (70 kg/m³)	EI 120 (ve i↔o)S	Aerated concrete (≥ 450 kg/m³)	≥ 100 mm	300Pa
		 Gypsum plaster / Mortar and cover boards + Mineral wool (115 kg/m³)	EI 120 (ve i↔o)S	Plasterboard type F (EN520)	≥ 100 mm	300Pa
FDC25 d100-d315 mm FDC40 d355-d800 mm	Floor/ceiling	 Gypsum plaster / Mortar	EI 120 (ho i↔o)S	Aerated concrete (≥ 450kg/m³) Reinforced concrete (≥ 2200kg/m³)	≥ 100 mm	500Pa
		 Fire Batt/ Weichschott	EI 90 (ho i↔o)S			300Pa

INSTALLATION

Check for more information about certificate installations in the declaration of performance:



www.klimaoprema.com/fdc/dop

- 

Aerated concrete (≥ 450 kg/m³) or reinforced concrete (≥ 2200 kg/m³) wall, more than 100 mm thick
- 

Gypsum blocks (≥ 995 kg/m³) wall, more than 70 mm thick
- 

Plasterboard wall, type F (EN520), Plasterboard wall, type A (EN520), more than 100 mm thick
- 

Shaft wall, steel frame construction
- 

Aerated concrete (≥ 450 kg/m³) or reinforced concrete (≥ 2200 kg/m³) ceiling / floor, more than 100 mm thick

FIRE DAMPER - FDC

- 

Gypsum plaster, mortar sealing or mortar and cover boards. Mortar EN 998-2 Classes M 2.5 to M 20 or equivalent mortars that meet the requirements of the above standards, gypsum mortar or concrete.
- 

Sealing with mineral wool and cover boards
- 

Sealing with mineral wool and fireproof coating - FireBatt / Weichschott
- 

Applique kit installation
- 

MF1/MF2 kit installation
- 

Remote from wall installation

Range	Supporting construction	Type of installation	Classification	Supporting construction details	Wall thickness	Tested underpressure
APP INSTALLATION FRAME FDC25 d100-d315 mm	Rigid wall 	APPLIQUE (installation frame)	EI 90 (ve i↔o)S	Aerated concrete (≥ 450kg/m³) Reinforced concrete (≥ 2200kg/m³)	≥ 100 mm	500Pa
		APPLIQUE (installation frame)	EI 90 (ve i↔o)S	Gypsum blocks (≥ 995kg/m³)	≥ 70 mm	500Pa
	Flexible wall 	APPLIQUE (installation frame)	EI 90 (ve i↔o)S EI 60 (ve i↔o)S	Plasterboard type F (EN520) A (EN520)	≥ 100 mm	500Pa
MF1/ MF2 INSTALLATION FRAME FDC25 MF1 d100-d315 mm FDC25/FDC40 MF2 d355-d800 mm	Rigid wall 	MF1 (installation frame)	FDC25:EI 60 (ve i↔o)S	Aerated concrete (≥ 450kg/m³) Reinforced concrete (≥ 2200kg/m³)	≥ 100 mm	500Pa
		MF2 (installation frame)	EI 90 (ve i↔o)S			FDC25: 300Pa FDC40: 500Pa
		MF1 (installation frame)	FDC25:EI 60 (ve i↔o)S	Gypsum blocks (≥ 995kg/m³)	≥ 70 mm	500Pa
		MF2 (installation frame)	EI 90 (ve i↔o)S			
	Flexible wall 	MF1 (installation frame)	A:FDC25:EI 60 (ve i↔o)S B:FDC25:EI 60 (ve i↔o)S	Plasterboard A:type A (EN520) B:type F (EN520)	≥ 100 mm	500Pa
		MF2 (installation frame)	A:EI 60 (ve i↔o)S B:EI 90 (ve i↔o)S			FDC25: 300Pa FDC40: 500Pa
	Floor/ceiling 	MF2 (installation frame)	FDC40:EI 90 (ho i↔o)S	Aerated concrete (≥ 450kg/m³) Reinforced concrete (≥ 2200kg/m³)	≥ 100 mm	300Pa
MF2 INSTALLATION FRAME FDC25 MF2 d100-d315 mm FDC40 MF2 d355-d800 mm	Flexible wall 	MF2 (installation frame)	EI 60 (ve i↔o)S	Shaft wall (steel frame)	≥ 75 mm	300Pa
			EI 90 (ve i↔o)S		≥ 90 mm	
ISOVER FDC25 d100-d315 mm FDC40 d355-d630 mm	Flexible wall 	REMOTE FROM WALL (Isover)	EI 60 (ve i↔o)S	Plasterboard type F (EN520)	≥ 100 mm	300Pa
	Rigid wall 			Aerated concrete (≥ 450kg/m³) Reinforced concrete (≥ 2200kg/m³)		

INSTALLATION

Check for more information about certificate installations in the declaration of performance:



www.klimaoprema.com/fdc/dop

-  Aerated concrete (≥ 450 kg/m³) or reinforced concrete (≥ 2200 kg/m³) wall, more than 100 mm thick
-  Gypsum blocks (≥ 995 kg/m³) wall, more than 70 mm thick
-  Plasterboard wall, type F (EN520), Plasterboard wall, type A (EN520), more than 100 mm thick
-  Shaft wall, steel frame construction
-  Aerated concrete (≥ 450 kg/m³) or reinforced concrete (≥ 2200 kg/m³) ceiling / floor, more than 100 mm thick

FIRE DAMPER - FDC

-  Gypsum plaster, mortar sealing or mortar and cover boards
-  Sealing with mineral wool and cover boards
-  Sealing with mineral wool and fireproof coating - FireBatt / Weichschott
-  Applique kit installation
-  MF1/MF2 kit installation
-  Remote from wall installation

MANUAL ACTUATORS R, R-S

Manual operating mechanism, optionally with end switches (R-S). In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermal fuse melting, or by manual activation on the operating mechanism. Upon closure, damper blade is locked in closed position and can only be opened manually. Thermal fuse melting point is 72 °C.



R25
(up to d315)



R40
(d355 up to d800)

- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

R25

R25 manual actuator is installed on FDC25 fire dampers up to size d315. It is available in version with (R-S) and without (R) end switches. End switches and thermal fuse are easily replaceable and available as service parts. To upgrade to EMS , upgrade of R25 to R40 is required.



R40

R40 manual actuator is installed on FDC40 fire dampers up to size d800. It is available in version with (R-S) and without (R) end switches. In case remote activation is needed, R40 actuator is easily upgradeable to electromagnetic EMS-S actuator with installation of the electromagnet. End switches , thermal fuse and electromagnet are easily replaceable and available as service parts.

Technical specifications

Nominal voltage	N/A
Power	N/A
Switching capacity	1 mA...500 mA, 5VDC...48 VDC
Blade closing time	Spring: 1 second
Blade opening time	Manual
Manual activation	Release button on the casing
Degree of protection	IP 42
Ambient temperature range	min. -30 °C, max. 50 °C
Ambient humidity	95% r.h., non-condensing
Service life	Min. 30,000 cycles
Maintenance	Maintenance-free
Weight R25/R40	0,5 kg / 1.7 kg

Wiring diagram

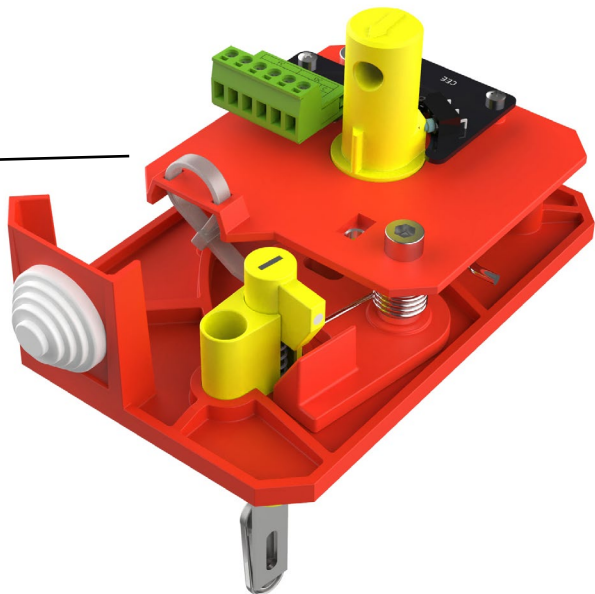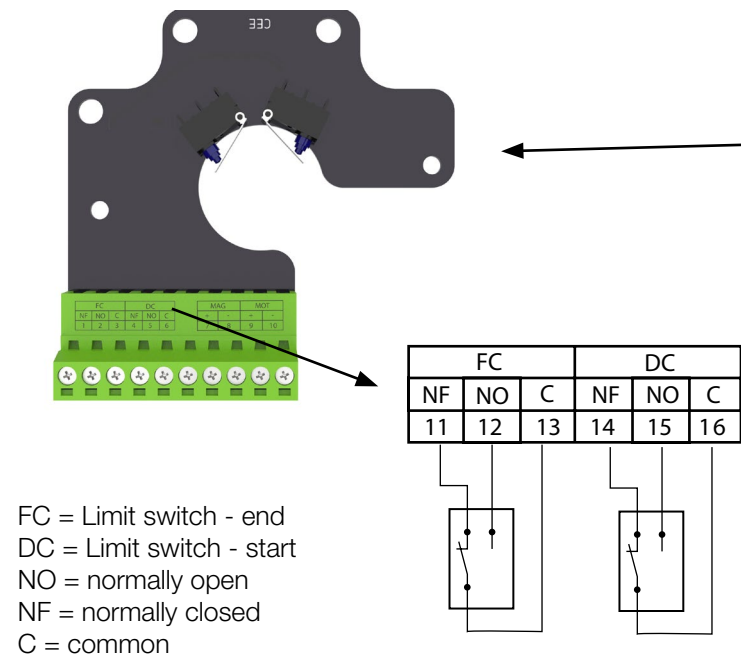

SOLENOID ACTUATOR EMS-S

Electromagnetic operating mechanism, comes with end switches as standard. In case of fire, the fire damper closes automatically. Damper closing can be initiated either by thermal fuse melting or remotely by triggering the electromagnet. Electromagnet is constantly under power and activates closing of the damper blade in case the power cuts out. Upon closure, damper blade is locked in closed position and can only be opened manually. Thermal fuse melting point is 72 °C. EMS-S mechanism is the same for FDC25/FDC40 fire dampers.





- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

Technical specifications

Nominal voltage	Solenoid: 24/ 48 VDC
Power	Dual voltage SOLENOID: Break of current: P _{nom} = 1.6 W
Switching capacity	1 mA...500 mA, 5 VDC...48 VDC
Blade closing time	Spring: 1 second
Blade opening time	Manual
Manual activation	Release button on the casing
Degree of protection	IP 42
Ambient temperature range	min. -30 °C, max. 50 °C
Ambient humidity	95% r.h., non-condensing
Service life	Min. 30,000 cycles
Maintenance	Maintenance-free
Weight	2,2 kg

Wiring diagram

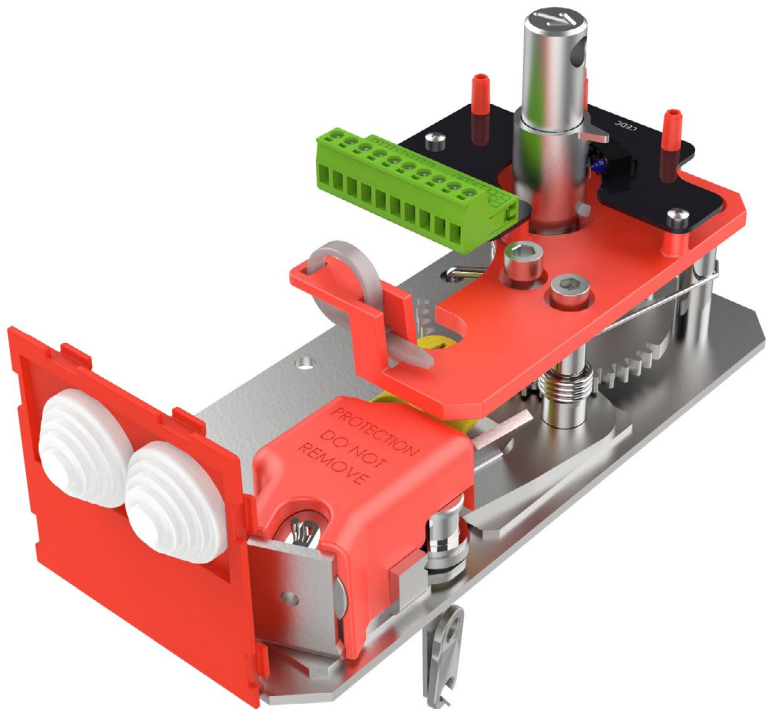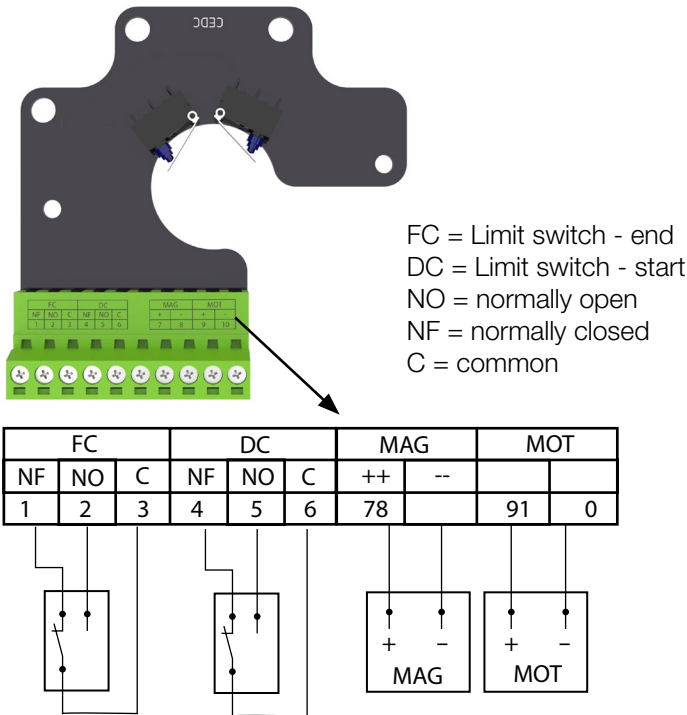

ELECTRIC ACTUATOR

M24-S, M230-S, M24-S-ST, M230-S-ST

Damper is delivered in closed position. When electric actuator is connected to the power supply, damper blade will open. When the damper reaches the end position (damper open), the electro motor will stop. Closing fire damper takes place automatically when a power failure occurs. Thermal tripping device that comes with fire damper causes power circuit break at a temperature of 72 °C (optional 95 °C). If checking is needed for proper functioning of fire damper, pushing

the switch on the thermal tripping device will close damper. When switch on tripping device is released, the damper will open. Damper can be opened without connecting to a voltage with enclosed handle by turning it in the direction of the arrow on electric actuator (clockwise). Damper can be locked in the desired position by fast turning handle a quarter of a turn (counterclockwise) for Belimo BF, and by pulling brake on Belimo BFL and BFN.

To unlock the electro motor, turn handle clockwise for a quarter of a turn for Belimo BF, or release brake for Belimo BFL and BFN. After release, damper will be closed by return spring. When damper is opened manually, electric actuator will not move the damper into closed position in case of power failure.

Technical specifications


Type of Belimo actuator	BFL24-T	BFN24-T	BFL230-T	BFN230-T	BF24-T	BF230-T
Nominal voltage	AC/DC 24 V, 50/60 Hz	AC 24 V, 50/60 Hz	AC 230 V, 50/60 Hz	AC 230 V, 50/60 Hz	AC/DC 24 V, 50/60 Hz	AC 230 V, 50/60 Hz
opening	2,5 W	4 W	3,5 W	5 W	7 W	8.5 W
holding	0,8 W	1,4 W	1,1 W	2,1 W	2 W	3 W
for wire sizing	4 VA	6 VA	6,5 VA	10 VA	10 VA	11 VA
End switch	1 mA...3 A (0.5 A), DC 5 V... AC 250V	1 mA...3 A (0.5 A), DC 5 V... AC 250 V	1 mA...3 A (0.5 A), DC 5 V... AC 250 V	1 mA...3 A (0.5 A), DC 5 V... AC 250 V	1 mA...6 A (3 A), DC 5 V... AC 250 V	1 mA...3 A (0.5 A), DC 5 V... AC 250 V
Running time	motor < 60 s	motor < 60 s	motor < 60 s	motor < 60 s	motor < 120 s	motor < 120 s
spring return	~20 s	~20 s	~20 s	~20 s	~16 s	~16 s
Ambient temperature range	min. -30 °C, max. 50 °C					



- PRODUCT OVERVIEW
- DIMENSIONS
- INSTALLATIONS
- ACTUATORS
- ACCESSORIES
- MAINTENANCE AND OPERATION

FIRE DAMPER - FDC


Wiring diagram

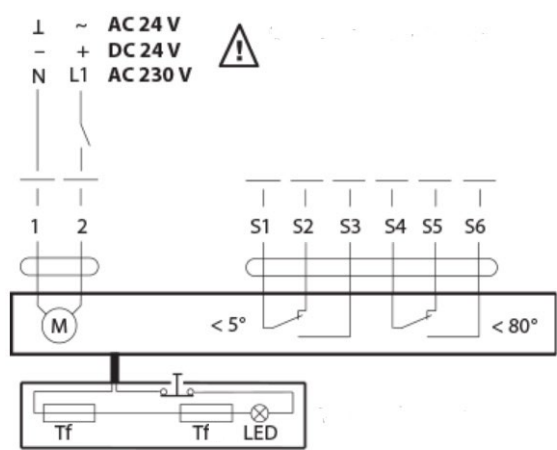

- 1 negative (direct-current) or neutral (alternating current)
- 2 positive (direct-current) or faze (alternating current)
- S1 common micro switch closed damper
- S2 normally closed micro switch closed damper
- S3 normally open micro switch closed damper
- S4 common micro switch open damper
- S5 normally closed micro switch open damper
- S6 normally open micro switch open damper
- Tf temperature sensor on the outer side of the duct (ambient temperature) max. 72 °C

ELECTRIC ACTUATOR SCHISCHEK ExMax

Damper is delivered in closed position. When electric actuator is connected to the power supply damper will open. When the damper reaches the end position(damper open), in which is it blocked, the electric actuator will stop. Closing fire damper takes place automatically when a power failure occurs. Thermal tripping device that comes with fire damper causes power circuit break at a temperature of 72 °C (inside or outside duct). If checking is needed for proper functioning of fire damper, pushing the switch on the thermal tripping device will close damper. When switch on tripping device is released, the damper will open.

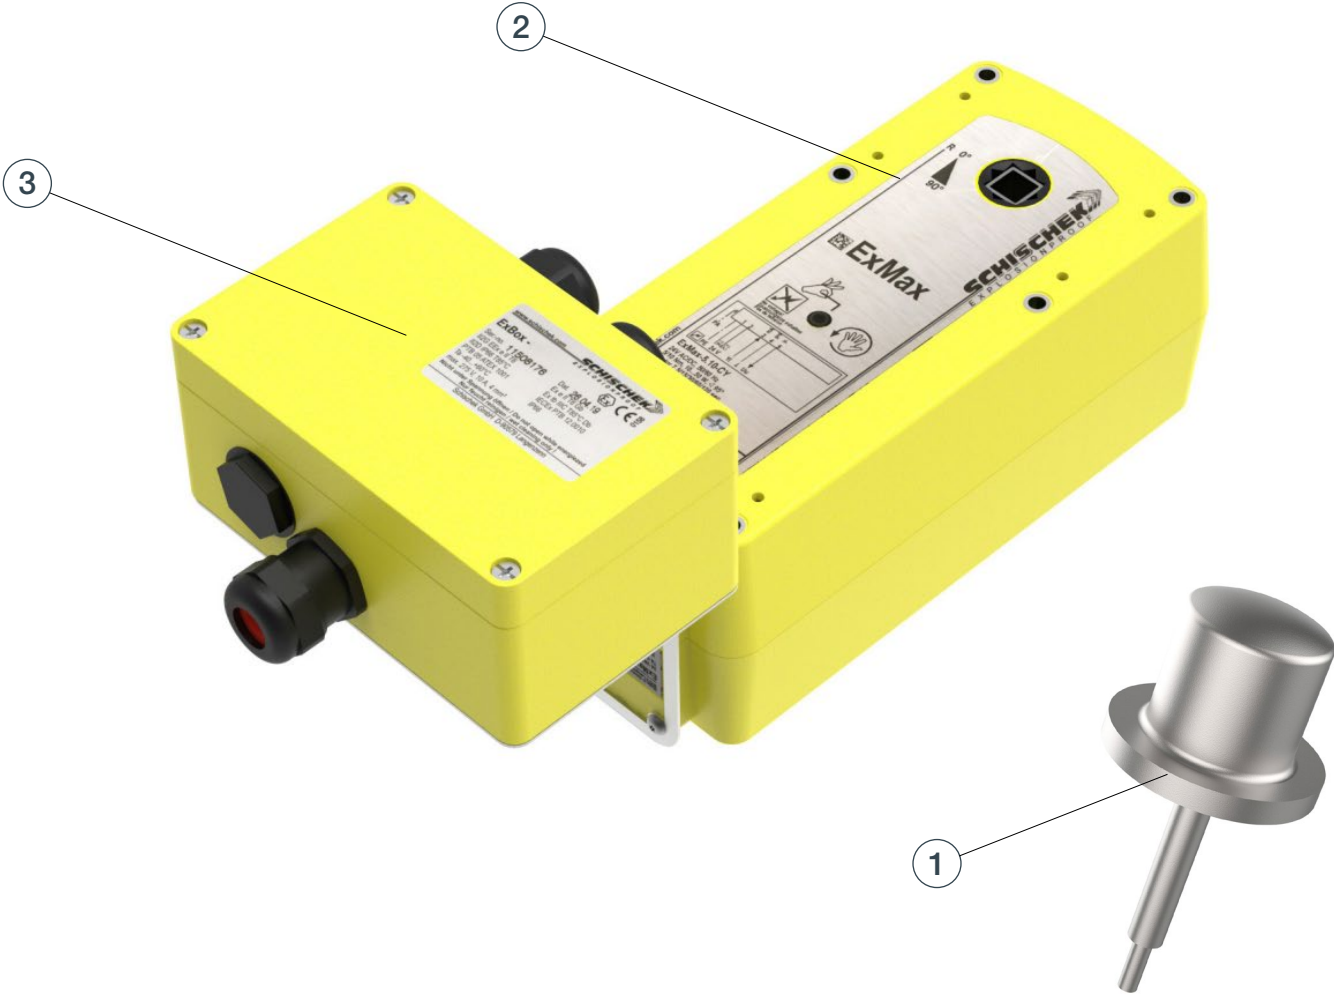

- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)


Damper can be opened without connecting to a voltage with enclosed Allen key, by turning in the direction of the arrow on electric actuator (clockwise). After release of Allen key, damper will go to closed position.



- 1) [Tecnical documentation Safety temperature trigger Schischek ExPro-TT](#)
- 2) [Tecnical documentation electric actuator Schischek ExMax-5.10-BF](#)
- 3) [Tecnical documentation Ex-e terminal box ExBox-BF](#)

Technical specifications

Type	ExMax -5.10-BF
Torque	5/10 Nm
Power Supply	24-230 V AC/DC
Running time	3/15/30/60/120 s / 90°
Spring return	3 or 10s / 90°
Control mode	On-Off, 3 position
Feedback	2 x aux switches + Ex. tripping device
Ambient temperature range	min. -40 °C, max. 40 °C
Ambient humidity	0-90% r.h., non-condensing
Service life	Min. 10,000 cycles @ 10 s, min 1000 cycles @ 1s
Maintenance	Maintenance-free
Weight	3,5 kg


Wiring diagram

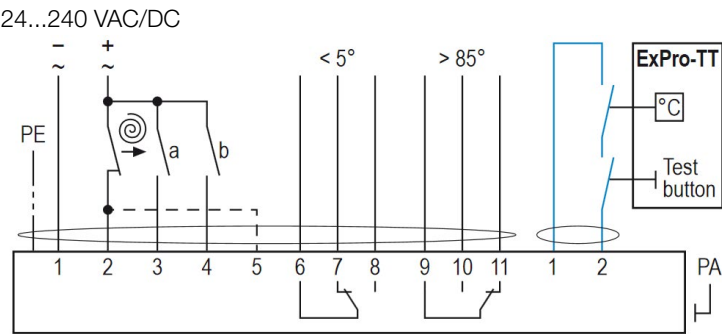

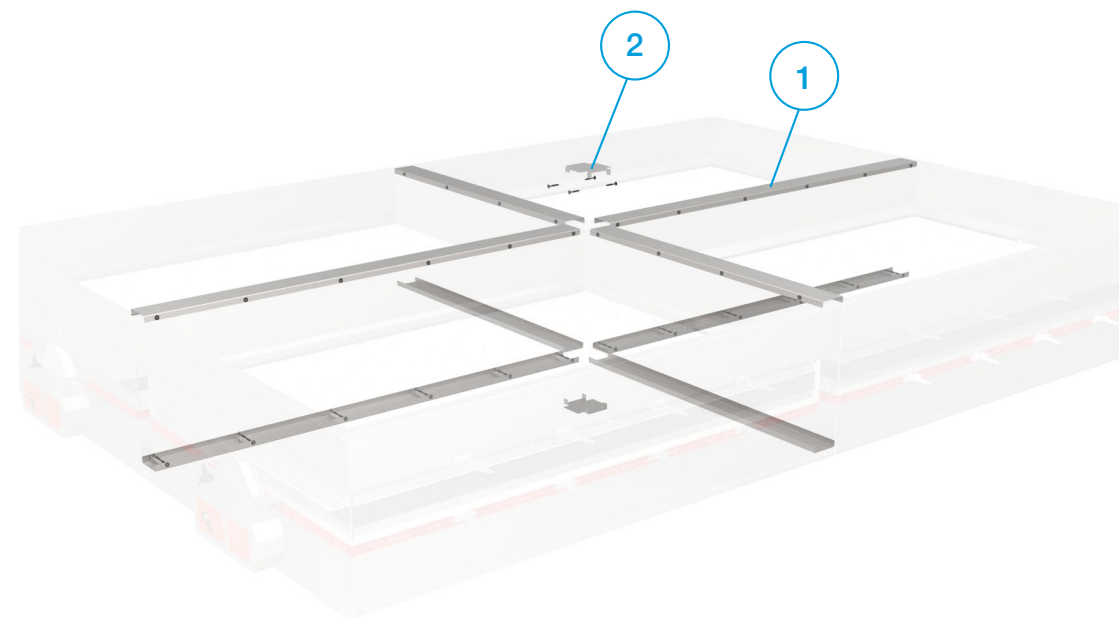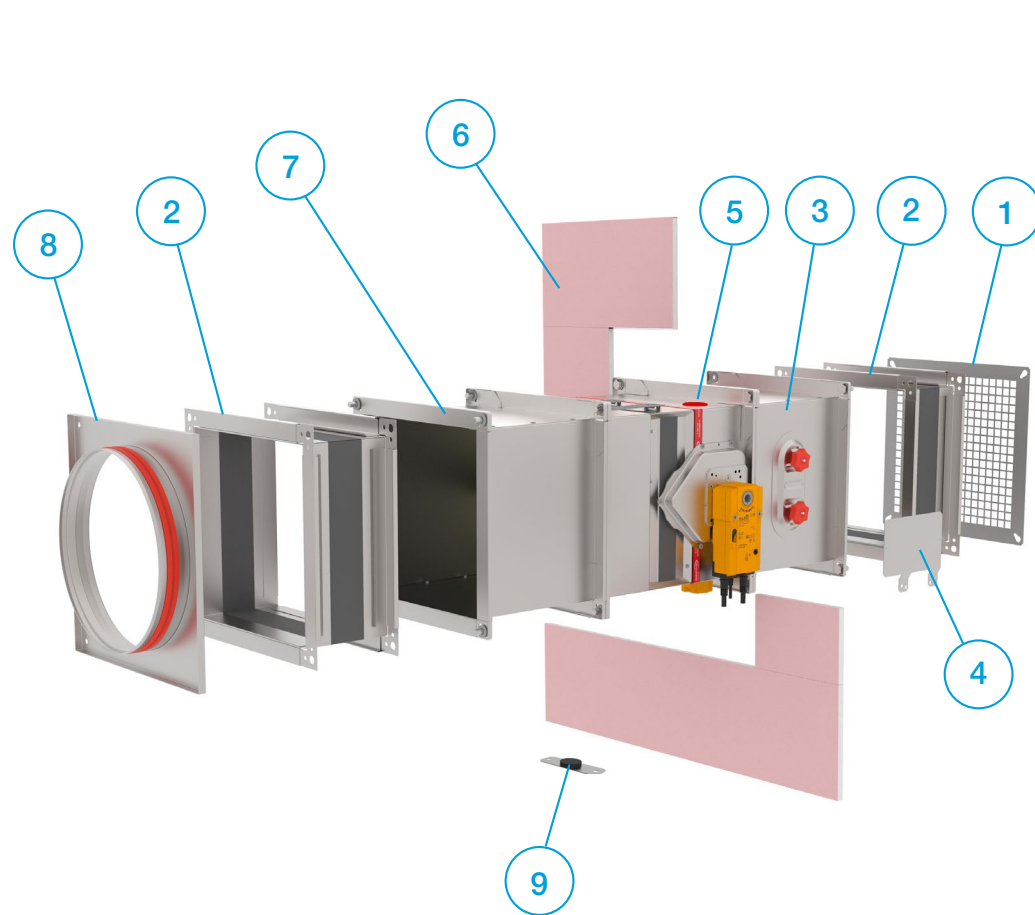


- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)


CF60

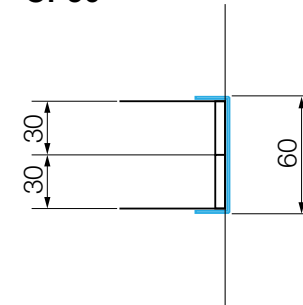


CF100

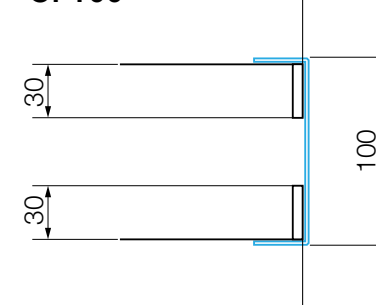

CP60

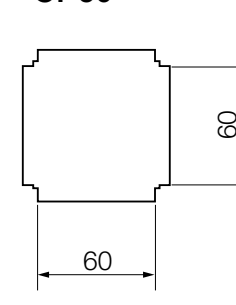

CP100

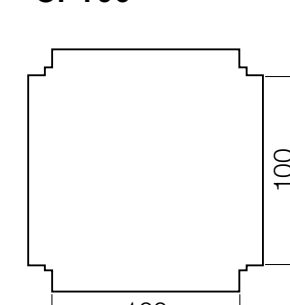

ACCESSORIES

FIRE DAMPER - FDC

Accessories

1. **FD-A-SG Safety grill** - Safety grille is used for protection of the fire damper and duct from large debris. Safety grille is produced out of galvanized steel and perforated with square 10x10mm perforation providing approx. 70% free cross section area. Fire damper, safety grille and, if applicable, extension piece are assembled at the factory to form a unit. FD-A-SG1-operation side, FD-A-SG2-installation side
2. **FD-A-FLEX Flexible duct connections** - Flexible duct connectors are used in HVAC systems for isolation from structure-borne noise, expansion compensation and fire damper connections (total length 130 mm, flexible 70mm).
3. **FD-A-EXT1 Extension piece on operation side** - is used when the height of the fire damper is more than 350mm and damper blade in open position is protruding out of the casing.
4. **FD-A-CMB Communication module bracket** - is used when the height of the fire damper is more than 350mm and damper blade in open position is protruding out of the casing.
5. **FD-A-IH Inspection hatch** - is used for performing regular visual functionality inspection checks.
6. **FD-A-CSP GKF boards for dry installation** - Calcium silicate plates are used in dry installations as insulation cover. It keeps the insulation in place and provides for better fire penetration characteristics of the whole installation. Cover the complete perimeter around fire damper from both sides with boards in 150 mm height.
7. **FD-A-EXT2 Extension piece on installation side** (250 mm)
8. **FD-A-CIRC Circular connections** - Are used to connect the circular ventilation ducts to the rectangular fire dampers.
9. **FD-BP-KIT Thermal fuse blanking plate** - is used for covering the thermal fuse hole on the casing in case of changing from the motor to the manual actuator. Installation with performed with 2 self-taping screws

Accessories for Battery installations

1. **CF60** - [Connecting frame 60 mm](#)
CF100 - [Connecting frame 100 mm](#)
 -Connecting frame length is 200... 1500 [mm]

2. **CP60** - [Connecting plate 60 mm](#)
CP100 - [Connecting plate 100 mm](#)

Attach the connecting frames to the dampers using the self-tapping screws every 150 mm and 4 self-tapping screws on every connecting plate.

CF60/CP60 kits are used when minimum possible size of the battery is needed. In this installation flanges are installed next to each other. CF100/CP100 kits are used when overall size of the battery installation needs match standard ventilation duct sizes (i.e. divisible by 50mm).

1




2



3



4

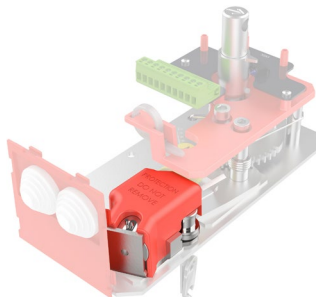

5



6


[PRODUCT OVERVIEW](#)

[DIMENSIONS](#)

[INSTALLATIONS](#)

[ACTUATORS](#)

[ACCESSORIES](#)

[REPLACEMENTS](#)

[MAINTENANCE AND OPERATION](#)

7



8



8



9



10




11



12



13

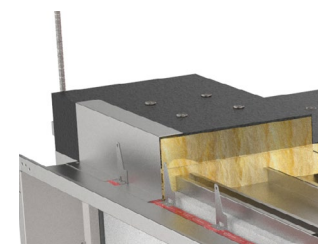

Spare parts

For safety reasons, parts need to be changed by a trained personnel or the manufacturer.

WARNING! Install the original parts only!

1. FD-A-THERM-72 [Fuse kit](#)
2. FD-A-R25S-KIT [Double contact S kit](#)
3. FD-A-R40S-KIT [Double contact S kit](#)
4. FD-A-EMS-KIT [Solenoid actuator](#)
5. FD-A-BAT72 [Belimo thermal fuse 72°C](#)
6. FD-A-ZBAT95 [Belimo thermal fuse 95°C](#)
7. Belimo BFL [Kit A](#) Upgrade to electric actuator (Belimo BFL)
8. Belimo BFN [Kit B](#) Upgrade to electric actuator (Belimo BFN)
9. Belimo BF [Kit C](#) Upgrade to electric actuator (Belimo BF)
10. FD-A-R40 [R40 manual mechanism](#)
11. FD-A-ERK [Electric actuator rotation kit](#)
12. FD-SSA [Smoke sensor](#)
13. MWC [Mineral wool cover](#) (for remote installation)

FIRE DAMPER - FDC

SMOKE SENSOR
ASSEMBLY
FD-A-SSA

Smoke sensor assembly is developed to detect smoke in ventilation ducts and combines a smoke detector and an adaptor system where both tube and housing are specially designed for optimum airflow through the smoke detector. Smoke sensor provides the signal for the fire damper which is activated when smoke is detected. Smoke sensor assembly consists of casing (length: FDC25=380 mm, FDC40=390 mm), smoke sensor and specially designed venturi pipe inside the duct.



- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)

(1) Type (2) Accessories (3) Dimension (4) Voltage

FD-A - SSA - d100 - 24

- (1) **FD-A** - Accessories for round fire damper

(2) **SSA** - Smoke sensor assembly
- (3) d100...d800 nominal diameter of the round fire damper

(4) **24** - Smoke sensor 24 V
230 - Smoke sensor 230 V

+ ACCESSORIES

FIRE DAMPER - FDC

For proper functioning of the smoke sensor (as it is physically connected as in the render above) a straight length of 5 times hydraulic diameter, in the size of the connecting duct, should be in front of the sensor. When the sensor is installed separate from the fire damper there are two conditions to be met:

- 1) Length of 5 times hydraulic diameter, in the size of the connecting duct, should be in front of the sensor.
- 2) Length of 3 times hydraulic diameter, in the size of the connecting duct, should be after the sensor.


For more information, visit website:
[Technical documentation Calectro](#)

Technical specifications


	FD-A-UG-8-E-24	FD-A-UG-8-E-230
Voltage Supply	24V AC/DC ±10% Not polarity sensitive	230V AC ±10%, Not polarity sensitive
Detector type	Optical EVC-PR-DA	Optical EVC-PR-DA
Max. power consumption	85 mA (DC), 235 mA (AC)	100 mA
Operating temperature	-20°C to +55°C	
Maximum humidity	95% rH	
Duct air velocity range	1 to 20 m/s	
Approvals	VdS, CE, EN-54-27	
Relay output	Potential free	
Smoke alarm relays	One changing contacts 250V, 8A and one bracking contact 250V, (A	
Service alarm	One breaking contact 250V, 1A	
System error alarm	One breaking contact 250V, 1A	
Low Flow alarm:	One breaking contact 250V, 1A	
LED on smoke detector:	Yellow - service alarm(contamination) Red - smoke alarm	
LED on PCB:	Green - normal operation Yellow flashing - system error Yellow - Low-Flow	

Wiring diagram

FD-A-UG-8-AFR-230V

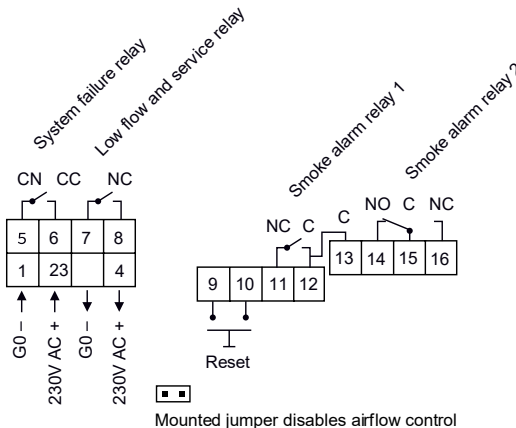

FD-A-UG-8-AFR-24V

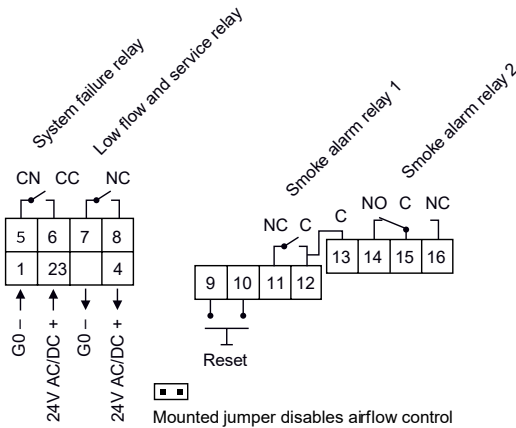



- ▼ [PRODUCT OVERVIEW](#)
- ▼ [DIMENSIONS](#)
- ▼ [INSTALLATIONS](#)
- ▼ [ACTUATORS](#)
- ▼ [ACCESSORIES](#)
- ▼ [MAINTENANCE AND OPERATION](#)



MAINTENANCE

FIRE DAMPER - FDC

TRANSPORT

After arrival, check the fire damper for transport damage and shortcomings. In case of any damage or shortcomings, immediately contact your supplier.

STORAGE

If the damper is not installed immediately:

- Remove any wrapping.
- Protect fire damper from dust and contamination.
- Do not expose the fire damper to the effects of weather - store fire damper in dry place.
- Do not store the unit below -20 °C or above 50 °C.

Please properly dispose of packaging material.

MAINTENANCE AND OPERATION

Fire dampers are designed with fully enclosed drive mechanism outside of the duct and as such do not require cleaning and regular maintenance.

However, activation mechanism should be inspected for proper operation on regular basis.

- Provide regular testing/inspection of the fire dampers. Inspection/test intervals should be carried out every six months or less according to the local legislature
- After each intervention, provide a systematic cleaning of dust and especially the solenoid and its movable plate
- Check the if the electrical terminals are tightened
- Cleaning instruction: clean with a sponge, with water or a mild detergent
- Disinfection instruction: spray disinfectant (disinfectant may contain alcohol which is flammable, take precaution to avoid ignition)

It is not permitted to alter the dampers in any way nor perform any changes to their structure (except for the service procedures described in this manual) without the manufacturer's consent. Provide at least one annual check of the damper. The functional test must be carried out in compliance with the basic maintenance principles of the European norms EN 13306, EN 15423 and EN15650.

COMMISSIONING

- Carefully unpack FDC fire damper - be careful of sharp edges and do not use excessive force for unpacking
- Inspect the fire damper - check the fire damper for damage
- Installation of the fire damper - according to the installation instructions.
- Before commissioning: check the fire damper functions.

FUNCTIONS

- Release mechanism:
Damper blade can be closed and opened manually
- 2) EMS:
Signal testing - the damper blade must close
- 3) Electric actuator:
Signal testing - the damper blade must close/open
- 4) Thermal fuse:
By a button - the damper blade must be closed by pressing the button



FIRE DAMPER - FDC

Images are for informational purposes only and may differ from the actual product.
Follow the latest versions of the catalog on the website.

-  Gradna 78A, 10430 Samobor, Croatia
-  +385 (0)1 33 62 513
-  info@klimaoprema.com
-  www.klimaoprema.com